

# buddy toys

## Model BEC 6210

Before using this product, please carefully read the information contained in this user's manual and on the packaging and keep it for future use. Changes in the text, design and technical specifications may be made without prior notice and we reserve the right to make such changes.

### FEATURES AND FUNCTIONS

- Minimum age for use: from 37 – 96 months
- Function: Remote-controlled electric car for children
- Power source:
  - 1× 12V 7Ah leaded
  - Remote control – 2× AAA batteries are not included
  - Steering wheel – 2× AA batteries are not included
- Charging 8 to 12 hours but no longer than 20 hours
- Operating time: 1 – 1,5 h
- Operating temperature 5 – 35 °C
- Frequency of the remote control: 2,4 GHz
- Max. range 20 m.
- Maximum load capacity 28kg
- Motor 2× 6V 15W
- Max. speed 3 – 7 km/h
- Parts of the package, see diagram.
- Charger (included): Input: AC 110-240 V 50/60 Hz; Output: DC 12V 900 mA

Assembly instructions, see picture instructions on the last page.

### INSTALLATION OF THE BATTERY AND THE POWER ADAPTER

Insert the batteries into the battery compartment. Connect together the connectors, connect the red end and the black end to the negative, respectively positive pole of the battery.

Note: Make sure that you have performed the connection correctly, red to red, black to black, otherwise a short circuit could result.

Using a screwdriver, release the battery cover and take it off. Insert the battery with the correct polarity +/- . Then return the cover to its original position and again secure it in place using the screw.

### REPLACING BATTERIES

Open the cover and insert the required batteries.

Do not remove rechargeable batteries from the toy before they are completely flat.

#### NORMAL OPERATION

The charging socket is located under the front seat. Open the filling cover and insert the power adapter plug, then connect the adapter to a power outlet.

Each operating hour requires 8 to 12 charging hours. However the actual charging must not last longer than 20 hours.

The adapter and battery may heat up while charging. This is normal.

Do not use non-functional or damaged adapters or batteries until they are repaired.

Regularly check the backup battery, adapter, cables and sockets.

Before first use, charge for 8-12 hours, but no longer than 20 hours.

Charge fully before using and do not forget to regularly recharge every 30 days. This will ensure normal battery operation. Otherwise it will not be possible to recharge the battery.

For safety reasons, only use the supplied battery that has protection against being inserted in the wrong direction.

### CURRENT PROTECTION

Current protection is installed under the seat.

The rear motor is equipped with a self-restoring fuse. Whenever it is overloaded or incorrectly controlled, the fuse automatically cuts off the power supply. Turn off the key and wait 30 seconds, then the fuse will restore itself.

The power supply device is equipped with a burn fuse. If a short circuit occurs, the fuse will burn out. So it will be necessary to replace it after resolving the problem with the short circuit.

### ATTENTION – PRODUCT

- The product must be assembled and put into operation by an adult!
- The car must only be operated under adult supervision.
- Do not touch the moving parts of the product. Danger of injury!
- The packaging is not a part of the toy, after unpacking, keep all its parts out of reach of children. Plastic foils present a risk of suffocation!
- The product is not designed for children 3 years of age and younger. It contains small parts – danger of swallowing. Do not leave children playing unsupervised.
- Do not expose the product to sources of heat such as fire, solar radiation, etc., this could damage the product or cause the batteries to explode.

# buddy toys

- Do not modify the product in any way, do not tamper with its construction or connection. There is a risk of loss of functionality, an injury or damage to property.
- Water must not reach the internal parts of the product.
- It is forbidden to use the car in public traffic, on roads, on slopes, near swimming pools or other dangerous locations.
- The car must not be overloaded. Maximum load capacity is 28kg.
- The car is designed for children aged 37 – 96 months.
- Improper handling may damage certain parts.
- Do not switch between fast travel forwards and backwards. Prior to switching direction, it is necessary to always stop the car.
- Wipe the car with a dry wiping cloth. Do not expose the car to dripping or spraying water. **ATTENTION! THE PRODUCT MUST NOT BE EXPOSED TO RAIN!**
- Restarting the motor may create sparks. It is forbidden to operate the car in a flammable or explosive environment, for example at a petrol station.
- Do not allow children to touch the wheels as their hand could become stuck or be injured. Prevent other children from approaching a moving car.
- Only operate the car on an even surface. Do not use in sand or on another hard surface.
- This seat is equipped with a safety belt, which serves as a decoration and to instil the importance of the safety belt to the child, it does not however serve the function of additional protection in this case.
- Show children how to start up and release the pedal, how to prevent damage and how to stop the car.
- Do not use a damaged car until it is repaired.
- Do not operate the car until it is properly assembled, it could be damaged.
- Regularly check and maintain the car to ensure the safety of your children.

## **ATTENTION – RC**

- Environment: select a safe place with sufficient area without barriers, animals and people. Do not collide into other objects.
- Do not operate the product at a distance greater than 20 m, otherwise you will not be able to control it.
- Do not use in unfavourable weather conditions (wind, rain). This would affect the control of the model and could lead to a loss of control and injuries or other damages.
- As soon as the model starts moving slower, it is time to recharge the batteries or to install new ones.
- Radio interference may result in strange behaviour of the product. Another model operated at the same frequency may interfere with the control of your product.
- Personal transmitters, mobile telephones, walkie-talkies and other transmission devices and also high voltage power lines may cause radio interference.

## **BATTERY – SAFE OPERATION**

- Use only the battery types recommended by the manufacturer.
- We recommend that batteries that are designed to be replaced are replaced with alkaline ones.
- The handling and charging of batteries may only be performed by an adult.
- Do not expose the batteries to fire, direct sunlight or other sources of heat.
- Remove rechargeable batteries from the product before recharging them.
- Rechargeable batteries must be charged before playing. Disconnect only when fully charged. Attention, after charging the surface may be hot.
- Adhere to the voltage specifically shown on the product or packaging.
- Make sure that the batteries are properly installed in the product and adhere to the correct polarity.
- You must immediately remove flat batteries from the product. Do not combine new and used batteries.
- If the product is not used for an extended period of time, remove all the batteries.
- It is forbidden to short-circuit the power supply terminals.
- A damaged or leaking battery must be replaced immediately.
- Do not throw used batteries into a fire or open their casing!
- Do not combine standard and rechargeable batteries. Non-rechargeable batteries must not be charged.
- In the event that leaked electrolyte comes into contact with eyes, rinse the eyes out with clean water and immediately seek professional medical help.
- Risk of fire. Do not short circuit.

## **CHARGER - SAFE OPERATION**

- Before charging, check that the voltage in your power grid corresponds to the parameters on the charger.
- Only use the original charger supplied by the manufacturer.
- The charger is not a toy. Charging may only be performed by an adult.
- The connector on the rechargeable battery must correspond to the respective connector on the charger.
- Do not place the device into water or expose it to rain or water.
- Disconnect the device from the mains power supply when not in operation.
- If ventilation openings are a part of the construction, do not clog them or open up the power supply part. Do not cover the charger during the charging process.
- The power cord must not be replaced. If the power cord is damaged, the device must be disposed of. Store in a clean condition in a dry and dark place.
- This device is not designed to be used by persons (including children) with limited physical or psychological abilities or by persons with insufficient experience and knowledge of operation unless under supervision or unless they are provided with instructions about the operation of the device by the person responsible for the safety of these people.

# buddy toys

- Adhere to all safety instructions to prevent damage to property or injuries.
- In the event that during the changing process you have a suspicion of any type of electrical fault (smell, overheating, change in colour, deformation), immediately disconnect the charger from the mains and do not use it any more. If you have a suspicion that water has entered the electrical components, take the device to a specialised service centre to eliminate any possible damage to the protective insulation of the product.

## STORAGE AND MAINTENANCE

Store the product in a clean condition in a dry and dark place. Clean with a dampened lint-free cloth. Do not use aggressive or abrasive cleaning products for cleaning. After use, clean and dry using a dry cloth.

## ECOLOGICAL DISPOSAL

At the end of their lifetime, neither the electrical device, nor battery packs, nor used batteries may be disposed of as unsorted communal waste. Take the used products to appropriate local collection points in accordance with local municipal codes. Ask your local authorities or collection facility for more details.

## DECLARATION OF CONFORMITY

The declaration of conformity is available at the company website [www.fastcr.cz](http://www.fastcr.cz).

## INSTRUCTIONS AND INFORMATION REGARDING THE DISPOSAL OF USED PACKAGING MATERIALS

Dispose of packaging material at a public waste disposal site.

## DISPOSAL OF USED ELECTRICAL AND ELECTRONIC APPLIANCES



The meaning of the symbol on the product, its accessory or packaging indicates that this product shall not be treated as household waste. Please, dispose of this product at your applicable collection point for the recycling of electrical & electronic equipment waste. Alternatively in some states of the European Union or other European states you may return your products to your local retailer when buying an equivalent new product. The correct disposal of this product will help save valuable natural resources and help in preventing the potential negative impact on the environment and human health, which could be caused as a result of improper liquidation of waste. Please ask your local authorities or the nearest waste collection centre for further details. The improper disposal of this type of waste may fall subject to national regulations for fines.

### For business entities in the European Union

If you wish to dispose of an electrical or electronic device, request the necessary information from your seller or supplier.

### Disposal in other countries outside the European Union

If you wish to dispose of this product, request the necessary information about the correct disposal method from local government departments or from your seller.



This product meets all the basic EU regulation requirements that relate to it.

Changes to the text, design and technical specifications may occur without prior notice and we reserve the right to make these changes.

Address of the importer: FAST ČR, a.s., Černokostelecká 1621, 251 01 Říčany, Czech Republic

	Value and precision	Unit
Manufacturer's name or trade mark, commercial registration number and address	HK 150V-120100	-
Model identifier	DONGGUAN STONE TECH CO.,LTD. No.16,KeJi 4th Road, SongShan Lake Park, DongGuan City	-
Input voltage	230	V
Input AC frequency	50	Hz
Output voltage	12,0	V
Output current	1,0	A
Output power	12,0	W
Average active efficiency	83,21	%
Efficiency at low load (10 %)	77,44	%
No-load power consumption	0,089	W

# Obsah je uzamčen

**Dokončete, prosím, proces objednávky.**

**Následně budete mít přístup k celému dokumentu.**



**Proč je dokument uzamčen? Nahněvat Vás rozhodně nechceme. Jsou k tomu dva hlavní důvody:**

- 1) Vytvořit a udržovat obsáhlou databázi návodů stojí nejen spoustu úsilí a času, ale i finanční prostředky. Dělali byste to Vy zadarmo? Ne\*. Zakoupením této služby obdržíte úplný návod a podpoříte provoz a rozvoj našich stránek. Třeba se Vám to bude ještě někdy hodit.

*\*) Možná zpočátku ano. Ale vězte, že dotovat to dlouhodobě nelze. A rozhodně na tom nezbohatneme.*

- 2) Pak jsou tady „roboti“, kteří se přiživují na naší práci a „vysávají“ výsledky našeho úsilí pro svůj prospěch. Tímto krokem se jim to snažíme překazit.

A pokud nemáte zájem, respektujeme to. Urgujte svého prodejce. A když neuspějete, rádi Vás uvidíme!