

tescoma®

President





en	Instructions for use	3
cs	Návod k použití	7
it	Istruzioni per l'uso	11
es	Instrucciones de uso	15
pt	Instruções de utilização	19
de	Gebrauchsanleitung	23
fr	Mode d'emploi	27
pl	Instrukcja użytkowania	31
sk	Návod na použitie	35
hu	Használati útmutató	39
ru	Инструкция по использованию	43

Instructions for use

Safety instructions

Read these Instructions before first use.

1. Before connecting the appliance, make sure that your voltage corresponds to the rating label on the appliance.
2. Provide for supervision when the appliance is used near children; the appliance must not be used by children under 8 years.
3. The blades are sharp – handle them with extra care, especially in cleaning.
4. Never let the blender run unattended.
5. If the plug or power cable is damaged, or the appliance is faulty, do not attempt to repair it, please contact a professional service.
6. The use of accessory attachments not recommended or sold by the manufacturer may result in fire, electric shock or personal injury.
7. Do not let the cord hang over the edge of a table or counter, or touch hot surfaces including the stove.
8. Do not plug the appliance into the power supply until it is fully assembled and always unplug the appliance before disassembling the appliance or handling the blade.
9. Do not use the blender with the blending button pressed for more than 120 seconds at a time! If the appliance begins to overheat due to prolonged uninterrupted blending, disconnect it from the grid, do not use it for 15 minutes, then connect again and continue blending.
10. Do not use the blender with the pulse mode button pressed for more than 10 seconds at a time!
11. This appliance is not intended for use by children under the age of 8 years and persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
12. Do not process more than three batches without interruption. Let the appliance cool down to room temperature before you continue to process.
13. Unplug from the power outlet when not in use, before putting on or taking off parts, and before cleaning.
14. To protect against fire, electric shock and personal injury, do not immerse the handle of the blender, its cord or plug in water or any other liquids.
15. The appliance is intended for household use only; do not use it outdoors.

Technical parameters

Voltage: AC 220–240 V / 50–60 Hz

Power input: 800 W

Blending container volume: 800 ml

Obsah je uzamčen

Dokončete, prosím, proces objednávky.

Následně budete mít přístup k celému dokumentu.



Proč je dokument uzamčen? Nahněvat Vás rozhodně nechceme. Jsou k tomu dva hlavní důvody:

- 1) Vytvořit a udržovat obsáhlou databázi návodů stojí nejen spoustu úsilí a času, ale i finanční prostředky. Dělali byste to Vy zadarmo? Ne*. Zakoupením této služby obdržíte úplný návod a podpoříte provoz a rozvoj našich stránek. Třeba se Vám to bude ještě někdy hodit.

**) Možná zpočátku ano. Ale vězte, že dotovat to dlouhodobě nelze. A rozhodně na tom nezbohatneme.*

- 2) Pak jsou tady „roboti“, kteří se přiživují na naší práci a „vysávají“ výsledky našeho úsilí pro svůj prospěch. Tímto krokem se jim to snažíme překazit.

A pokud nemáte zájem, respektujeme to. Urgujte svého prodejce. A když neuspějete, rádi Vás uvidíme!