




2502907

<b>EN</b>	19" 60V Self-propelled Lawn Mower	USER'S MANUAL	1
<b>DE</b>	19" 60V Rasenmäher mit Eigenantrieb	BEDIENUNGSANLEITUNG	8
<b>ES</b>	Cortacésped Auto-propulsado 19" 60V	MANUAL DE UTILIZACIÓN	15
<b>IT</b>	Tosaerba semovente da 46 cm (19") 60V	MANUALE D'USO	22
<b>FR</b>	Tondeuse à traction de 19" 60 V	MANUEL D'UTILISATION	29
<b>PT</b>	Corta relva auto propulsado 19" 60V	MANUAL DE UTILIZAÇÃO	36
<b>NL</b>	19" 60V zelfrijdende grasmaaimachine	GEbruikersHANDLEIDING	43
<b>RU</b>	Самостоятельная газонокосилка 19 дюймов 60 В	РУКОВОДСТВО ПО ЭКСПЛУАТАЦИИ	50
<b>FI</b>	19" 60V itsevetävä ruohonleikkuri	KÄYTTÄJÄN KÄSIKIRJA	57
<b>SV</b>	19-tums 60 V självgående gräsklippare	INSTRUKTIONSBOK	64
<b>NO</b>	19-tommers 60V selvgående gressklipper	BRUKSANVISNING	71
<b>DA</b>	19" 60V Selvkørende plæneklipper	BRUGERVEJLEDNING	78
<b>PL</b>	Samojedna kosiarka 19" 60 V	PODRECZNIK OBSZUGI	85
<b>CS</b>	Sekačka na trávu s pojezdem 19" 60V	NÁVOD K OBSLUZE	92
<b>SK</b>	19" 60 V samohybná kosačka	NÁVOD NA POUŽITIE	99
<b>SL</b>	19" 60-voltna kosilnica s funkcijo samozaganjanja	UPORABNI KI PRIROČNIK	106
<b>HR</b>	19" samopomična kosilica od 60V	KORISNIČKI PRIRUČNIK	113
<b>HU</b>	19" 60V Őnjáró fűnyíró	HASZNÁLATI ÚTMUTATÓ	120
<b>RO</b>	Mașină de tuns iarba auto-propulsată de 19" la 60V	MANUAL DE UTILIZARE	127
<b>BG</b>	19" косачка за трева с автоматично придвижване, 60 V	РЪКОВОДСТВО ЗА УПОТРЕБА	134
<b>EL</b>	Μηχανή κοπέματος γρασίδιου με αυτόματη ώθηση 19" 60V	ΕΓΧΕΙΡΙΔΙΟ ΧΡΗΣΗΣ	142
<b>AR</b>	19" تلو ف 60 فوق ب ي ت اذ ل ع خ د ل ا ب ش ا ش ح ز ج ذ ل ا	دخستس ل ل ا ل ي ل د	149
<b>TR</b>	19" 60V Kendinden Tahrikli Çim Biçme Makinesi	KULLANICI KILAVUZU	156
<b>HE</b>	תימצע הענהב טלוו 60 וניא' 19 אשד תחסכ	מדריך למשתמש	163
<b>LT</b>	19 col. 60 V savaeigė vejapjovė	NAUDOJIMO VADOVAS	169
<b>LV</b>	19" 60V Pašgājējs zāles pļāvējs	LIETOTĀJA ROKASGRĀMATA	176
<b>ET</b>	Isevedav muruniiduk 60 V, 19"	KASUTAJAJUHEND	183



## English (Original Instructions)

### SPECIFICATIONS

Lawn mower	2502907
Width of cut	46 cm
Height of cut	25 mm - 80 mm
No-load speed	2800 rpm
Self propelled speed	0.5-1.5 m/s
Sound pressure level	LpA :73 dB(A), K:3.0
Measured sound power level	LwA :85.5 dB(A)
Maximum vibration	<2.5 m/s <sup>2</sup> , K=1.5
Grassbox capacity	52 L
Net weight	28 kg
Spare Blade	2920407
Battery	Lithium-ion
Model number	2918307 / 2918407
Battery charger	
Model number	2918507
Double-insulated construction	

20. Blade
21. Motor shaft
22. Fan
23. Blade bolt
24. Blade posts
25. Battery release button
26. Mulching plug
27. Side discharge deflector
28. Side discharge door
29. Block of wood (not included)
30. Wrench (not included)
31. Battery key
32. Self propel lever
33. Self-Propel speed controls

### WARNING

Use of any other battery packs may result in a risk of fire, electric shock, or injury to persons.

### KNOW YOUR LAWN MOWER

See *figure 1*.

The safe use of the product requires an understanding of the information on the tool and in this operator's manual as well as a knowledge of the project you are attempting. Before use of this product, familiarize yourself with all operating features and safety rules.

### BATTERY METER

The battery meter measures the amount of charge remaining in the battery.

### GRASSBOX

The grassbox collects grass clippings and prevents them from being discharged across your lawn as you mow.

### HEIGHT ADJUSTMENT LEVER

The height adjustment lever provides cutting height adjustments.

### MOTOR CONTROL CABLE

The motor control cable, located on the upper handle of the mower, engages and disengages the motor and blade.

### MULCHING PLUG

Your mower is equipped with a mulching plug that covers the rear discharge opening, which allows the mower blade to cut and recut for finer clippings.

### DESCRIPTION

1. Power lever
2. Motor control cable
3. Start button
4. Upper handle
5. Lower handle
6. Height adjustment lever
7. Battery door
8. Front wheel
9. Rear wheel
10. Grassbox
11. Battery (not included)
12. Handle knob
13. Knob
14. Bolt
15. Grassbox handle
16. Rear door
17. Rear discharge opening
18. Door rod
19. Hooks

## English (Original Instructions)

### SIDE DISCHARGE DEFLECTOR

Use the side discharge deflector on your mower when the grass is too high to mulch or when side discharging is preferred. The grass clippings produced when using the side discharge deflector are noticeably larger than those produced when using the mulching plug and side mulching plate.

### SIDE DISCHARGE DOOR

Your mower is equipped with a door that covers the side discharge opening, which allows the mower blade to cut and recut the grass for finer clippings if the mulching plug is engaged, or otherwise sends the grass clippings to the collection bag.

### ASSEMBLY

#### UNPACKING

This product requires assembly.

- Carefully remove the product and any accessories from the box. Make sure that all items listed in the packing list are included.

#### WARNING

Do not use this product if any parts on the packing list are already assembled to your product when you unpack it. Parts on this list are not assembled to the product by the manufacturer and require customer installation. Use of a product that may have been improperly assembled could result in serious personal injury.

- Inspect the product carefully to make sure no breakage or damage occurred during shipping.
- Do not discard the packing material until you have carefully inspected and satisfactorily operated the product.
- If any parts are damaged or missing, please call your Greenworks tools service centre for assistance.

### PACKING LIST

- Lawn mower
- Battery key
- Grassbox
- Mulching plug
- Side discharge deflector
- Operator's manual
- Knobs
- Bolts

#### WARNING

If any parts are damaged or missing do not operate this product until the parts are replaced. Using a product with damaged or missing parts could result in serious personal injury.

#### WARNING

Do not attempt to modify this product or create accessories not recommended for use with this product. Any such alteration or modification is misuse and could result in a hazardous condition leading to possible serious personal injury.

#### WARNING

Do not insert battery key until assembly is complete and you are ready to mow. Failure to comply could result in accidental starting and possible serious personal injury.

#### WARNING

To prevent accidental starting that could cause serious personal injury, always remove the battery pack from the product when assembling parts.

#### WARNING

Never operate the mower without the proper safety devices in place and working. Never operate the mower with damaged safety devices. Operation of this product with damaged or missing parts could result in serious personal injury.

### UNFOLDING AND ADJUSTING LOWER HANDLE

See figure 2.

- Pull and rotate the handle knobs 90° on both sides to loosen the lower handles on both sides.
- Move the lower handles to the operating position. You may raise or lower the handle to a position comfortable for you. There are 3 positions for you to choose. Release the handle knobs to lock the lower handle into position.

**NOTE:** Ensure both sides are set at the same position for proper assembly.

### INSTALLING THE UPPER HANDLE

See figure 3.

- Align the mounting holes on the upper handle and the lower handle. Insert the carriage bolts and use the knobs to tighten them. Repeat the operation on the

# Obsah je uzamčen

**Dokončete, prosím, proces objednávky.**

**Následně budete mít přístup k celému dokumentu.**



**Proč je dokument uzamčen? Nahněvat Vás rozhodně nechceme. Jsou k tomu dva hlavní důvody:**

- 1) Vytvořit a udržovat obsáhlou databázi návodů stojí nejen spoustu úsilí a času, ale i finanční prostředky. Dělali byste to Vy zadarmo? Ne\*. Zakoupením této služby obdržíte úplný návod a podpoříte provoz a rozvoj našich stránek. Třeba se Vám to bude ještě někdy hodit.

*\*) Možná zpočátku ano. Ale vězte, že dotovat to dlouhodobě nelze. A rozhodně na tom nezbohatneme.*

- 2) Pak jsou tady „roboti“, kteří se přiživují na naší práci a „vysávají“ výsledky našeho úsilí pro svůj prospěch. Tímto krokem se jim to snažíme překazit.

A pokud nemáte zájem, respektujeme to. Urgujte svého prodejce. A když neuspějete, rádi Vás uvidíme!