


# Amazfit Verge User Manual

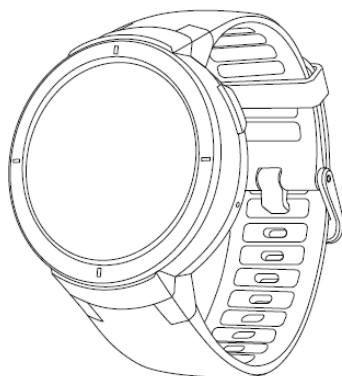

# Contents

Watch Operating Instructions & Watch Status.....	3
1. Button Descriptions.....	3
2. Touch Screen Gesture Operations.....	3
3. Off-Screen Mode.....	3
4. Low-Light Mode.....	4
5. Lock-Screen Second-Hand Mode.....	4
6. System Status Symbol.....	5
Wearing the Watch & Charging Methods.....	6
1. Daily Wear.....	6
2. Wear during exercise.....	6
3. Charging.....	6
Use of Watch Functions.....	7
1. Watch Face.....	7
2. Widgets & Applications.....	7
3. Exercise.....	7
4. Health.....	10
5. Heart Rate.....	10
6. Playing Music.....	11
7. Mobile Phone Music Control.....	12
8. Sleep.....	12
9. Bluetooth Phone.....	13
10. Weather.....	14
11. Alarms.....	14
12. Stopwatch.....	14
13. Timer.....	14
14. Compass.....	14
15. Schedule.....	14
Watch Notifications.....	15
1. Message Notifications.....	15
Connecting to a Computer.....	15
1. Connecting with a PC.....	15
2. Connecting with a Mac.....	16
3. Copying Files.....	16
Upgrading the Watch System.....	16
Daily Watch Maintenance.....	16

# Watch Operating Instructions & Watch Status

## 1. Button Descriptions



Watch Status	Button Functions	Tapping Methods
In standby	Unlock the watch	Short press
After unlocking	Initiate the voice function from the watch face	Short press
	Return to the watch face from other interface	Short press
Others	Turn on the watch	Press and hold for 2 seconds
	Turn off the watch	Press and hold for 6 seconds

## 2. Touch Screen Gesture Operations

Tap the screen function items	Use this feature to go to the next item or select the current item
Slide the screen left and right	Switch left and right the interface
Swipe the screen up and down	Scroll up and down the interface
Long press the watch-face interface	Activate the watch-face selection function

## 3. Off-Screen Mode

After binding the watch to your phone, it enters the off-screen mode by default. In this mode, the watch displays a black screen in standby, and will not be display the time and the watch face until you raise your wrist. When a message notification is received, the watch screen will light up to display the message content.

Turning on the off-screen mode will extend the watch's standby time.

You can switch from the off-screen mode to low-light mode by swiping down from the watch face and tap **Settings** → **Preferences** → **Screen lock mode** → **Low light** in the watch.

# Obsah je uzamčen

**Dokončete, prosím, proces objednávky.**

**Následně budete mít přístup k celému dokumentu.**



**Proč je dokument uzamčen? Nahněvat Vás rozhodně nechceme. Jsou k tomu dva hlavní důvody:**

- 1) Vytvořit a udržovat obsáhlou databázi návodů stojí nejen spoustu úsilí a času, ale i finanční prostředky. Dělali byste to Vy zadarmo? Ne\*. Zakoupením této služby obdržíte úplný návod a podpoříte provoz a rozvoj našich stránek. Třeba se Vám to bude ještě někdy hodit.

*\*) Možná zpočátku ano. Ale vězte, že dotovat to dlouhodobě nelze. A rozhodně na tom nezbohatneme.*

- 2) Pak jsou tady „roboti“, kteří se přiživují na naší práci a „vysávají“ výsledky našeho úsilí pro svůj prospěch. Tímto krokem se jim to snažíme překazit.

A pokud nemáte zájem, respektujeme to. Urgujte svého prodejce. A když neuspějete, rádi Vás uvidíme!