

 **esperanza**[®]
creating space for your dreams

MULTICOOKER

COOKING MATE



MANUAL
EKG011

MULTICOOKER

TECHNICAL SPECIFICATIONS

Input voltage: 220-240V~ 50Hz

Power: 860W

Inner pot capacity: 5L

Inner pot coating: non-stick

Steam vent cup: removable

11 programmable functions

Preset time: 10 minutes – 24 hours

Cooking time adjustable

Accessories: measuring cup, rice scoop, soup ladle, Steam basket

Power cord length: 100cm 3G0.75mm²

Stainless steel housing

Product size: Ø25,5*31cm

GENERAL SAFETY INSTRUCTIONS

Read the operating instructions carefully before putting the appliance into operation and keep the instructions including the warranty, the receipt and, if possible, the box with the internal packing. If you give this device to other people, please also pass on the operating instructions.

- The appliance is designed exclusively for private use and for the envisaged purpose. This appliance is not fit for commercial use.
- Do not use it outdoors. Keep it away from sources of heat, direct sunlight, humidity (never dip it into any liquid) and sharp edges. Do not use the appliance with wet hands. If the appliance is humid or wet, unplug it immediately.
- When cleaning or putting it away, switch off the appliance and always pull out the plug from the socket (pull the plug itself, not the lead). If the appliance is not being used and remove the attached accessories.
- Do not operate the device without supervision. If you leave the room you should always turn the device off. Remove the plug from the socket.
- The device and the mains lead have to be checked regularly for signs of damage. If damage is found the device must not be used.
- Do not try to repair the appliance on your own. Always contact an authorized technician. To avoid the exposure to danger, always have faulty cable be replaced only by the manufacturer, by our customer service or by qualified person and with a cable of the same type.
- Use only original spare parts.
- Pay careful attention to the following "Special Safety Instructions".

CHILDREN AND FRAIL INDIVIDUALS

- In order to ensure your children's safety, please keep all packaging (plastic bags, boxes, polystyrene etc.) out of their reach.

WARNING!

Do not allow small children to play with the foil as there is a danger of suffocation!

- This device is not intended to be used by individuals (including children) who have restricted physical, sensory or mental abilities and/or insufficient knowledge and/or experience, unless they are supervised by an individual who is responsible for their safety or have received instructions on how to use the device.
- Children should be supervised at all times in order to ensure that they do not play with the device.

SPECIAL SAFETY INSTRUCTIONS FOR THIS DEVICE

- Make sure the heating element and the outside of the inner pot are clean and dry before you put the plug in the wall socket.
- Do not use the appliance if the sealing ring is damaged.
- Do not plug in the appliance or press any of the buttons on the control panel with wet hands.
- Never connect this appliance to an external timer switch in order to avoid a hazardous situation.
- Only use the rice scoop provided. Avoid using sharp utensils.
- Do not expose the multicooker to high temperatures, nor place it on a working or still hot stove or cooker.
- Always insert the inner pot before you put the plug in the wall socket and switch on the device.
- Always unplug the multicooker if you are not going to use it for a longer period of time.
- Always let the multicooker cool down before you clean or move it.
- Do not place the inner pot directly over an open fire to cook.
- If the appliance is used improperly or for professional or semi-professional purposes or if it is not used according to the instructions in this user manual, the guarantee becomes invalid and the producer refuses liability for any damage caused.

- Place the multicooker on a stable, horizontal and level surface.
- The accessible surfaces may become hot when the appliance is operating. Only touch the control panel.
- Beware of hot steam coming out of the steam vent during cooking or out of the multicooker when you open the lid.
- Do not lift or move the multicooker by its handle while it is operating.
- Be careful with the inner pot and the steam basket when you handle them after the cooking process, as they may be hot and heavy.
- Do not expose the multicooker to direct sunlight.
- Do not insert metallic objects or alien substances into the steam vent.
- Do not place a magnetic item on the lid. Do not use the appliance near a magnetic item.
- Do not use the inner pot if it is deformed.
- Do not exceed the maximum water level indicated in the inner pot to prevent overflows.
- Do not place the rice scoop inside the pot while cooking, keeping warm or reheating.
- Always clean the appliance after use.
- Do not clean the main unit in the dishwasher.



Obsah je uzamčen

Dokončete, prosím, proces objednávky.

Následně budete mít přístup k celému dokumentu.



Proč je dokument uzamčen? Nahněvat Vás rozhodně nechceme. Jsou k tomu dva hlavní důvody:

- 1) Vytvořit a udržovat obsáhlou databázi návodů stojí nejen spoustu úsilí a času, ale i finanční prostředky. Dělali byste to Vy zadarmo? Ne*. Zakoupením této služby obdržíte úplný návod a podpoříte provoz a rozvoj našich stránek. Třeba se Vám to bude ještě někdy hodit.

**) Možná zpočátku ano. Ale vězte, že dotovat to dlouhodobě nelze. A rozhodně na tom nezbohatneme.*

- 2) Pak jsou tady „roboti“, kteří se přiživují na naší práci a „vysávají“ výsledky našeho úsilí pro svůj prospěch. Tímto krokem se jim to snažíme překazit.

A pokud nemáte zájem, respektujeme to. Urgujte svého prodejce. A když neuspějete, rádi Vás uvidíme!