



GAMEPHONE CONTROLLER PRO

User's Manual



Thank you for buying the Bigben Interactive controller for smart phones and tablets. This product has been designed to improve your game experience.

Please keep this instruction manual for future reference. If you require any assistance or help please contact the Helpline.

Warranty

This product bearing the Bigben Interactive trademark, is guaranteed by the manufacturer for a period of 1 year from the date of purchase, and will, during this period be replaced with the same or a similar model, at our option, free of charge, if there is a defect due to faulty material, or workmanship. This guarantee does not cover defects arising from accidental damage, misuse or wear and tear, and is available only to the original purchaser of the product. This does not affect your statutory rights.

Product features

- 4 compatibility modes - IOS, Android*, Keyboard and HID mode
- 8 action buttons
- D-pad and dual analogue stick control
- Bluetooth® connection
- Built in rechargeable battery
 - 550 mAh Li-ion
 - 16 hours playing game
 - 2-3 hours to charge
- Removable phone holder

*Compatible with Android 3.2 and above.


Product contents

- Gamephone Controller Pro
- Phone holder
- USB charging cable
- Stand for table

CONTROLLER SET-UP AND USE

Before using the Gamephone Controller Pro, please ensure that the internal battery is fully charged.

01. Connect the supplied USB cable to the micro USB connection on the front of the controller.
02. Connect the larger USB connection to any compatible USB power source, i.e. a PC or USB AC adaptor.
03. The charge LED will now light to indicate that it is charging. Allow to charge for 2 – 3hours
04. When charging is complete, the charge light will switch off. Your controller is now ready for use.

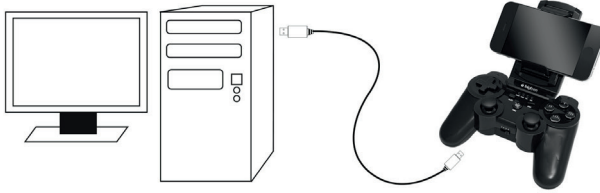

FITTING THE PHONE HOLDER

Your Gamephone is supplied with a removable phone holder to conveniently hold your phone during play.

To attach or remove it from the controller, follow these steps.



01. Slide the holder into the slot in the top of the controller. When it is fully inserted, it will click into place.
02. Slide the lock switch left on the rear of the controller to lock the holder in place.
03. Loosen the knob on the rear to the holder so you can place your phone in landscape or portrait orientation.
04. Tighten the knob and fit your phone into the sprung holder.
05. To remove the holder, firstly remove your phone.
06. Push the lock switch right and then pull to the holder out of the controller.

IMPORTANT

For the first set up, please ensure that you set the controller for your correct country and keyboard set up.

For AZERTY (French) press buttons 2 and HOME together for 5 seconds for the first power on.

For QWERTZ (German) press buttons 1 and HOME together for 5 seconds for the first power on.

For QWERTY (UK, AUS & US) press buttons 4 and HOME together for 5 seconds for the first power on.

USING THE CONTROLLER ON IPHONE, IPOD OR IPAD. IOS ICADE MODE. MODE 1.

01. On your device, go to Settings \ General \ Bluetooth® and set Bluetooth® to 'ON'

Obsah je uzamčen

Dokončete, prosím, proces objednávky.

Následně budete mít přístup k celému dokumentu.



Proč je dokument uzamčen? Nahněvat Vás rozhodně nechceme. Jsou k tomu dva hlavní důvody:

- 1) Vytvořit a udržovat obsáhlou databázi návodů stojí nejen spoustu úsilí a času, ale i finanční prostředky. Dělali byste to Vy zadarmo? Ne*. Zakoupením této služby obdržíte úplný návod a podpoříte provoz a rozvoj našich stránek. Třeba se Vám to bude ještě někdy hodit.

**) Možná zpočátku ano. Ale vězte, že dotovat to dlouhodobě nelze. A rozhodně na tom nezbohatneme.*

- 2) Pak jsou tady „roboti“, kteří se přiživují na naší práci a „vysávají“ výsledky našeho úsilí pro svůj prospěch. Tímto krokem se jim to snažíme překazit.

A pokud nemáte zájem, respektujeme to. Urgujte svého prodejce. A když neuspějete, rádi Vás uvidíme!