

# morphy richards®

## intellisteam™



### Food Steamer

Please read and keep these instructions

GB

### Cuiseur vapeur

Merci de bien vouloir lire et conserver ces instructions

F

### Dampfgarer

Lesen Sie diese Bedienungsanleitung, und heben Sie sie gut auf

D

### Panela a Vapor

Leia e guarde estas instruções

P

### Vaporiera

Leggere e conservare le presenti istruzioni

I

### Dampkoger

Læs og gem denne vejledning

DK

### Ångkokare

Läs och spara denna bruksanvisning

S

### Urządzenie do gotowania na parze

Prosimy zapoznać się z niniejszą instrukcją obsługi i zachować ją do wykorzystania w przyszłości

PL

### Parní hrnec

Přečtěte si tyto pokyny a uschovejte je

CZ

### Parný hrniec

Prečítajte si tieto pokyny a dodržiavajte ich

SLK



[www.morphyrichards.com](http://www.morphyrichards.com)



## HEALTH AND SAFETY

The use of any electrical appliance requires the following common sense safety rules.

**Please read these instructions carefully before using the product.**

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, if they have been given supervision or instruction concerning the use of the appliance in a safe way and understand the hazards involved.
- Children shall not play with the appliance.
- Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervision.
- Keep the appliance and its cord out of reach of children less than 8 years.

### Location

- This appliance is intended to be used in household and similar applications such as:
  - farm houses;
  - by clients in hotels, motels and other residential type environments; bed and breakfast type environments.It is not suitable for use in staff kitchen areas in shops, offices and other working environments.
- Do not use outdoors or near water.
- Do not place directly under kitchen wall cupboards when in use, as it produces large amounts of steam. Avoid reaching over the steamer when in use.

### Mains cable

- The mains cable should reach from the socket to the base unit without straining the connections.
- Do not let the cable hang over the edge of the table or counter and keep it away from any hot surfaces.
- Do not let the cable run across an open space e.g. between a low socket and table.
- If the supply cable is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.



## Personal safety

- Do not touch hot surfaces. Use oven gloves or a cloth when removing the lid or handling hot containers as hot steam will escape.
- **WARNING:** To protect against fire, electric shock and personal injury, do not immerse cord, plugs, or appliance in water or other liquid.
- **WARNING:** Extreme caution must be used when moving the steamer when containing hot food, water, or other hot liquids.
- Appliances must not be immersed.
- Unplug from the socket when not in use, before putting on or taking off attachments, and before cleaning.
- Do not operate any appliance with a damaged lead or plug, or after an appliance has malfunctioned, or has been dropped or damaged in any way. Contact Morphy Richards for advice on examination, repair or electrical or mechanical adjustment.
- Do not fill above the maximum level. If the steamer is over-filled, boiling water may be ejected which can scald.

## Other safety considerations

- Do not use attachments or tools not recommended by Morphy Richards as this may cause fire, electric shock or injury.
- To open, lift the lids off towards yourself but tilted away from you.
- Do not use any steamer parts in a microwave or on any cooking/heated surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Do not leave it in a damp and corrosive environment.
- Do not switch the steamer on unless it contains at least 1 cup of water, otherwise the steamer may be damaged.
- Always make sure the water does not fall below the minimum level.

## Treating scalds

- Run cold water over the affected area immediately. Do not stop to remove clothing, get medical help quickly.

## Electrical requirements

Check that the voltage on the rating plate of your appliance corresponds with your house electricity supply which must be A.C. (Alternating Current).

Should the fuse in the mains plug require changing, a 13 amp BS1362 fuse must be fitted.

**WARNING: This appliance must be earthed.**

## INTRODUCTION

Thank you for your recent purchase of the Intellisteam.

Please read this instruction booklet carefully to ensure you get the best performance from your new product.

GB



# Obsah je uzamčen

**Dokončete, prosím, proces objednávky.**

**Následně budete mít přístup k celému dokumentu.**



**Proč je dokument uzamčen? Nahněvat Vás rozhodně nechceme. Jsou k tomu dva hlavní důvody:**

- 1) Vytvořit a udržovat obsáhlou databázi návodů stojí nejen spoustu úsilí a času, ale i finanční prostředky. Dělali byste to Vy zadarmo? Ne\*. Zakoupením této služby obdržíte úplný návod a podpoříte provoz a rozvoj našich stránek. Třeba se Vám to bude ještě někdy hodit.

*\*) Možná zpočátku ano. Ale vězte, že dotovat to dlouhodobě nelze. A rozhodně na tom nezbohatneme.*

- 2) Pak jsou tady „roboti“, kteří se přiživují na naší práci a „vysávají“ výsledky našeho úsilí pro svůj prospěch. Tímto krokem se jim to snažíme překazit.

A pokud nemáte zájem, respektujeme to. Urgujte svého prodejce. A když neuspějete, rádi Vás uvidíme!