

Microwave Oven

User manual

MC28M6055**



SAMSUNG

Contents

Safety instructions	3	Using the dough proof/yogurt features	23
General safety	6	Using the power defrost features	24
Microwave operation precautions	7	Using the auto reheat/cook features	26
Limited warranty	7	Using the crusty plate	27
Product group definition	7	Hot Blast	28
Correct Disposal of This Product (Waste Electrical & Electronic Equipment)	8	Grilling	28
Cooking instructions on food packaging	8	Choosing the accessories	29
Cooking instructions	8	Combining microwaves and grill	29
		Combining microwaves and hot blast	30
		Switching the beeper off	31
		Using the child lock features	32
		Using the turntable on/off features	32
Installation	9		
Accessories	9	Cookware guide	33
Installation site	9		
Turntable	9	Cooking guide	34
Maintenance	10	Microwaves	34
Cleaning	10	Cooking	34
Replacement (repair)	10	Reheating	37
Care against an extended period of disuse	10	Reheating liquids	38
		Reheating baby food	38
		Remark:	38
		Defrosting	40
		Grill	41
		Microwave + Grill	42
		Hot blast	44
		Microwave + Hot blast	44
		Tips and tricks	46
Oven features	11	Troubleshooting	47
Oven	11	Troubleshooting	47
Control panel	11	Information code	50
Oven use	12	Technical specifications	51
How a microwave oven works	12		
Checking that your oven is operating correctly	12		
Setting the time	13		
Cooking/Reheating	13		
Adjusting the cooking time	14		
Stopping the cooking	15		
Setting the energy save mode	15		
Using the hot blast auto features	15		
Using the slim fry features	19		
Using the healthy cooking features	21		

Safety instructions

IMPORTANT SAFETY INSTRUCTIONS

READ CAREFULLY AND KEEP FOR FUTURE REFERENCE.

MICROWAVE FUNCTION ONLY

WARNING: If the door or door seals are damaged, the oven must not be operated until it has been repaired by a competent person.

WARNING: It is hazardous for anyone other than a competent person to carry out any service or repair operation that involves the removal of a cover which gives protection against exposure to microwave energy.

WARNING: Liquids and other foods must not be heated in sealed containers since they are liable to explode.

WARNING: Only allow children to use the oven without supervision when adequate instructions have been given so that the child is able to use the oven in a safe way and understands the hazards of improper use.

This appliance is intended to be used in household only and it is not intended to be used such as:

- staff kitchen areas in shops, offices and other working environments;
- farm houses;

- by clients in hotels, motels and other residential environments;
- bed and breakfast type environments.

Only use utensils that are suitable for use in microwave ovens. When heating food in plastic or paper containers, keep an eye on the oven due to the possibility of ignition.

Metallic containers for food and beverages are not allowed during microwave cooking.

The microwave oven is intended for heating food and beverages. Drying of food or clothing and heating of warming pads, slippers, sponges, damp cloth and similar may lead to risk of injury, ignition or fire.

If smoke is observed (emitted), switch off or unplug the appliance and keep the door closed in order to stifle any flames.

Microwave heating of beverages can result in delayed eruptive boiling, therefore care must be taken when handling the container.

The contents of feeding bottles and baby food jars shall be stirred or shaken and the temperature checked before consumption, in order to avoid burns.

Eggs in their shell and whole hard-boiled eggs should not be heated in microwave ovens since they may explode, even after microwave heating has ended.

Obsah je uzamčen

Dokončete, prosím, proces objednávky.

Následně budete mít přístup k celému dokumentu.



Proč je dokument uzamčen? Nahněvat Vás rozhodně nechceme. Jsou k tomu dva hlavní důvody:

- 1) Vytvořit a udržovat obsáhlou databázi návodů stojí nejen spoustu úsilí a času, ale i finanční prostředky. Dělali byste to Vy zadarmo? Ne*. Zakoupením této služby obdržíte úplný návod a podpoříte provoz a rozvoj našich stránek. Třeba se Vám to bude ještě někdy hodit.

**) Možná zpočátku ano. Ale vězte, že dotovat to dlouhodobě nelze. A rozhodně na tom nezbohatneme.*

- 2) Pak jsou tady „roboti“, kteří se přiživují na naší práci a „vysávají“ výsledky našeho úsilí pro svůj prospěch. Tímto krokem se jim to snažíme překazit.

A pokud nemáte zájem, respektujeme to. Urgujte svého prodejce. A když neuspějete, rádi Vás uvidíme!