


## Digistat 3

### 7 Day programmable room thermostat

#### Installation and operating instructions

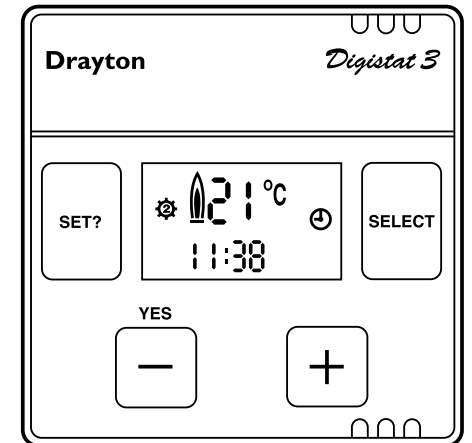

 
#### TO VIEW OR CHANGE THE FACTORY SETTINGS

(steps 6-14)


6. Press the "SET?" button until this display is shown.



7. Press the Yes (-) button. You have selected the Monday to Friday part of the programme.



 
8. Press the Yes (-) button again. This tells you that at 6.30 a.m., the heating system will control your home at 20°C. If you wish to alter the temperature use the + and - buttons.



9. Press the "SET?" button. The time will now flash. If you wish to alter the switching time use the + and - buttons. This will change the switching time in 10 minute steps.



 
10. Press the "SET?" button, this tells you that at 8.30 a.m., the heating system will control your home at 16°C. If you wish to alter this temperature use the + and - buttons.




11. Continue to press the "SET?" button as in steps 9 and 10 above to advance through the times and temperatures for Mon. to Fri. (1-5). If you wish to alter any of the times and temperatures use the + and - button, when the one you wish to alter is flashing.



 12. Once Mon. to Fri. have been set, the display will show as here. This means do you want to set the times for Monday (1) differently from the rest of the week? If you do, press the Yes (-) Button, and follow the routine as steps 9 to 11.



 13. Continue to press the "SET?" button to advance through the week (1 - 5). When the display is as shown here, press the Yes (-) button if you wish to view or alter the times for Sat.-Sun. (6-7). Repeat steps 9-12 as required.



14. Continue to press "SET?" button until you return to normal operating mode with a display similar to the one shown here.



#### OPERATING MODES

The Digistat can be operated in one of three modes.

- 1) ☀ – Timed, all preset times and temperatures
- 2) ☾ – Continuous night temperature (useful for low limit temperature protection when on holiday)
- 3) ⚙ – Continuous 'DAY 1' temperature

Use the SELECT button to change the operating mode to suit your requirements, the symbols are positioned on the right hand side of the display.

#### TEMPERATURE OVERRIDE

If at anytime during normal operation, you wish to temporarily increase or decrease the set temperature use the + or - buttons to change to your desired setting. This can be done without entering the SET mode. Five seconds after releasing the + or - button the display will revert to showing the actual room temperature. The Digistat will now control the temperature to the override setting until the next programmed switching time, when it will revert to the times and temperatures you have already programmed.

#### BATTERY REPLACEMENT

30 days before the batteries need re-replacing, a battery symbol will flash in the right hand side of the display (Diagram C). This signifies that two 1.5V type AA **alkaline batteries** will be needed to replace the existing ones. If battery replacement is carried out in this condition the programmed settings will only be held in the memory for a maximum of one minute, after which re-programming may be necessary.



Diagram C

#### IMPORTANT

To avoid the possibility of having to re-programme the switching times and temperatures, it is advisable to wait until the display with a flashing battery symbol changes to a continuous battery only display (after 30 days - Diagram D). In this condition the unit will remain OFF but your



Diagram D

programmed settings will be held in memory for a number of weeks. The battery compartment can now be left open, to replace the batteries, for approximately one hour. If the compartment is left open for longer; the unit will revert to the factory preset times and temperatures. It may be necessary to reset the correct time of day after changing the batteries.

The battery compartment is situated at the bottom of the unit (press to unlatch and slide down). Ensure new batteries are installed correctly.

#### HELPFUL HINTS

**1) First/Last Set Times** The Day 1 setting ⚙ cannot be programmed before 12.00 am. The night setting ☾ can be programmed at whatever time you require, even after 12.00 am (midnight) so long as it is not programmed more than 23 hours 50 minutes after the Day 1 setting.

**2) Part or Full Day Omission** If during programming the Digistat one of the symbols on the left hand side of the screen starts to flash, this indicates that two or more of the switching times have been set to the same time. This facility enables you to omit one or more of the switched periods. When one or more switching times are programmed together the later setting takes precedent. For example, if all four switching times were set together the Digistat would control continuously at the fourth (night) temperature setting ☾.

**3) Programme Sequence** The Digistat will not allow you to program the switched periods out of sequence but will hold the times together as stated above.

**4) Reset** If at any time during the programming you get confused and would like to start the procedure from the beginning press the SELECT and - buttons at the same time and hold for two seconds. This resets the Digistat to the factory preset times and temperatures shown in the table (overleaf).

#### 5) Self Revert

If during programming no button is pressed for between one and two minutes the Digistat will revert automatically to its normal operating mode.

#### CONFORMS TO THE ESSENTIAL REQUIREMENTS OF THE FOLLOWING DIRECTIVES:

89/336/EEC – Electromagnetic compatibility  
73/23/EEC – Low voltage directive



#### Siebe Climate Controls Limited

Chantry Close, West Drayton, Middlesex UB7 7SP  
Telephone: (01895) 444012 Sales Fax: (01895) 421901  
Technical Helpline Telephone: (01895) 460444

#### A Invensys product

Siebe Climate Controls continuously seek to improve products and reserve the right to make changes without notice

090 714  
1099

# Obsah je uzamčen

**Dokončete, prosím, proces objednávky.**

**Následně budete mít přístup k celému dokumentu.**



**Proč je dokument uzamčen? Nahněvat Vás rozhodně nechceme. Jsou k tomu dva hlavní důvody:**

- 1) Vytvořit a udržovat obsáhlou databázi návodů stojí nejen spoustu úsilí a času, ale i finanční prostředky. Dělali byste to Vy zadarmo? Ne\*. Zakoupením této služby obdržíte úplný návod a podpoříte provoz a rozvoj našich stránek. Třeba se Vám to bude ještě někdy hodit.

*\*) Možná zpočátku ano. Ale vězte, že dotovat to dlouhodobě nelze. A rozhodně na tom nezbohatneme.*

- 2) Pak jsou tady „roboti“, kteří se přiživují na naší práci a „vysávají“ výsledky našeho úsilí pro svůj prospěch. Tímto krokem se jim to snažíme překazit.

A pokud nemáte zájem, respektujeme to. Urgujte svého prodejce. A když neuspějete, rádi Vás uvidíme!