


Instruction Manual

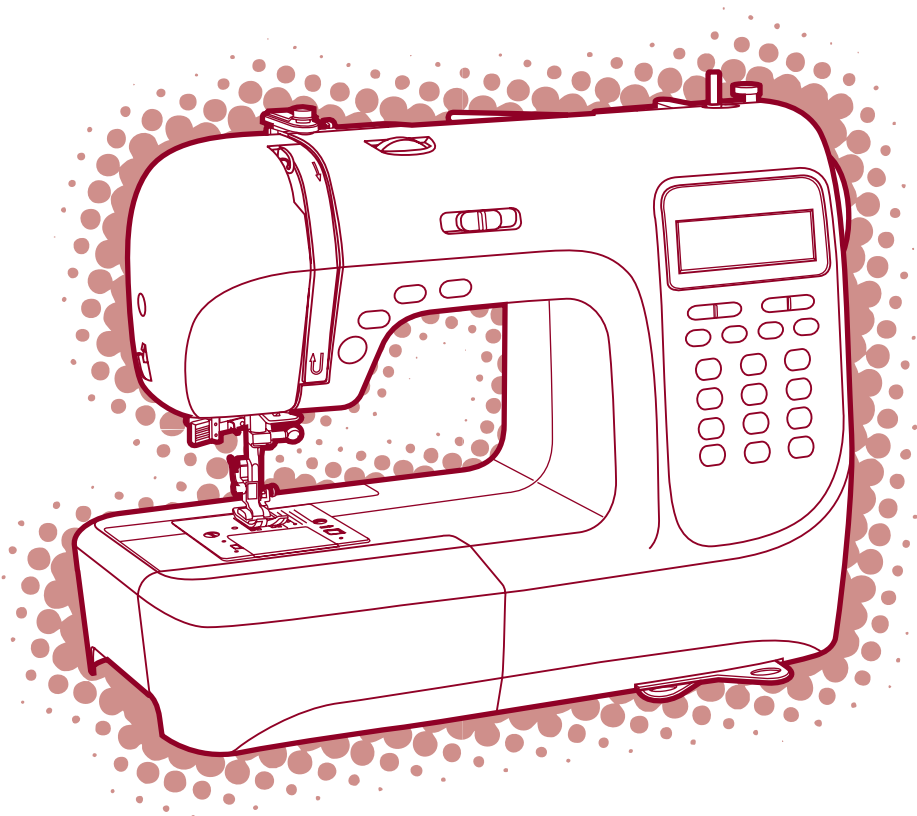

Important safety instructions

When using an electrical appliance, basic safety should always be followed, including the following:
Read all instructions before using this sewing machine.

DANGER -To reduce the risk of electric shock:

1. An appliance should never be left unattended when plugged in.
2. Always unplug this appliance from the electric outlet immediately after using and before cleaning.

WARNING -To reduce the risk of burns, fire, electric shock, or injury to persons:

1. Do not allow to be used as a toy. Close attention is necessary when this appliance is used by or near children.
2. Use this appliance only for its intended use as described in this manual. Use only the attachments recommended by the manufacturer as contained in this manual.
3. Never operate this appliance if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or dropped into water. Return the appliance to the nearest authorized dealer or service center for examination, repair, electrical or mechanical adjustment.
4. Never operate the appliance with any air openings block. Keep ventilation openings of the sewing machine and foot controller free from accumulation of lint, dust, and loose cloth.
5. Keep fingers away from all moving parts. Special care is required around the sewing machine needle.
6. Always use the proper needle plate, a wrong needle plate can cause the needle to break.
7. Do not use bent needles.
8. Do not pull or push fabric while stitching. It may deflect the needle causing it to break.
9. Switch the sewing machine off ("O") when making any adjustments in the needle area, such as threading needle, changing needle, threading bobbin, or changing presser foot, and the light.
10. Always unplug sewing machine from the electrical outlet when removing covers, lubricating, or when making any other user servicing adjustments mentioned in the instruction manual.
11. Never drop or insert any object into any opening.
12. Do not use outdoors.
13. Do not operate where aerosol spray products are being used or where oxygen is being administered.
14. To disconnect, turn all controls to the off ("O") position, then remove plug from outlet.
15. Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
16. The sound pressure level under normal operating conditions is 75dB(A).
17. Please turn off the machine or unplug when the machine is not operating properly.
18. Never place anything on the foot controller.
19. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
20. Children should be supervised to ensure that they do not play with the appliance.

SAVE THESE INSTRUCTIONS

This sewing machine is intended for household use only.

PRINCIPAL PARTS OF THE MACHINE	1
ACCESSORIES	2
CONNECTING THE MACHINE TO THE POWER SOURCE	3
Connecting the machine	3
STARTING SEWING	4
Foot control	4
CHANGING THE PRESSER FOOT	5
TYPE OF PRESSER FOOT CHART	6
REPLACING THE NEEDLE	7
MATCHING NEEDLE/ FABRIC/ THREAD	7
WINDING THE BOBBIN	8-9
Bobbin winding	8-9
INSERTING THE BOBBIN	10
THREADING THE UPPER THREAD	11-12
USING THE NEEDLE THREADER	13
THREAD TENSION	14
RAISING UP THE LOWER THREAD	15
CUTTING THE THREAD	15
TWO-STEP PRESSER FOOT LIFTER	16
TO RAISE OR DROP THE FEED DOGS	16
BUTTONS OF THE MACHINE	17-18
LCD SCREEN	19
PATTERN CHART	20
OPERATION BUTTONS	21-22
Start/stop button	21
Reverse button	21
Auto-lock button	22
Needle up/ down position button	22
MEMORY BUTTONS	23
Memory button	23
Clear button	23
Arrow button	23
FUNCTION BUTTONS	24-25
Stitch width adjustment button	24
Stitch length adjustment button	25
MODE selection button	25
Mirror button	26
SELECTION BUTTONS	27
Direct pattern selection and number buttons	27
USEFUL SKILLS	28-29
Sewing corners	28
Reverse	28
Free arm	28
Installing the extension table	29
Sewing on the heavy fabric	29
STRAIGHT STITCHES AND NEEDLE POSITION	30
ZIGZAG STITCHES	30
STRETCH STITCH	31

Obsah je uzamčen

Dokončete, prosím, proces objednávky.

Následně budete mít přístup k celému dokumentu.



Proč je dokument uzamčen? Nahněvat Vás rozhodně nechceme. Jsou k tomu dva hlavní důvody:

- 1) Vytvořit a udržovat obsáhlou databázi návodů stojí nejen spoustu úsilí a času, ale i finanční prostředky. Dělali byste to Vy zadarmo? Ne*. Zakoupením této služby obdržíte úplný návod a podpoříte provoz a rozvoj našich stránek. Třeba se Vám to bude ještě někdy hodit.

**) Možná zpočátku ano. Ale vězte, že dotovat to dlouhodobě nelze. A rozhodně na tom nezbohatneme.*

- 2) Pak jsou tady „roboti“, kteří se přiživují na naší práci a „vysávají“ výsledky našeho úsilí pro svůj prospěch. Tímto krokem se jim to snažíme překazit.

A pokud nemáte zájem, respektujeme to. Urgujte svého prodejce. A když neuspějete, rádi Vás uvidíme!