



Husqvarna Viking™
BY HUSQVARNA VIKING



USER'S GUIDE

E20

This household sewing machine is designed to comply with IEC/EN 60335-2-28 and UL1594

IMPORTANT SAFETY INSTRUCTIONS

When using an electrical appliance, basic safety precautions should always be followed, including the following:

Read all instructions before using this household sewing machine.

DANGER - To reduce the risk of electric shock:

- A sewing machine should never be left unattended when plugged in. Always unplug this sewing machine from the electric outlet immediately after using and before cleaning.
- Always unplug before relamping. Replace bulb with same type rated 10 Watt (110-120V), 15 Watt (220-240V).

WARNING - To reduce the risk of burns, fire, electric shock, or injury to persons:

- Do not allow to be used as a toy. Close attention is necessary when this sewing machine is used by or near children and infirm persons.
- Use this sewing machine only for its intended use as described in this manual. Use only attachments recommended by the manufacturer as contained in this manual.
- Never operate this sewing machine if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or dropped into water. Return the sewing machine to the nearest authorized dealer or service center for examination, repair, electrical or mechanical adjustment.
- Never operate the sewing machine with any air openings blocked. Keep ventilation openings of the sewing machine and foot controller free from the accumulation of lint, dust, and loose cloth.
- Keep fingers away from all moving parts. Special care is required around the sewing machine needle.
- Always use the proper needle plate. The wrong plate can cause the needle to break.
- Do not use bent needles.
- Do not pull or push fabric while stitching. It may deflect the needle causing it to break.
- Switch the sewing machine off ("0") when making any adjustment in the needle area, such as threading needle, changing needle, threading bobbin, or changing presser foot, etc.
- Always unplug sewing machine from the electrical outlet when removing covers, lubricating, or when making any other user servicing adjustments mentioned in the instruction manual.
- Never drop or insert any object into any opening.
- Do not use outdoors.
- Do not operate where aerosol (spray) products are being used or where oxygen is being administrated.
- To disconnect, turn all controls to the off ("0") position, then remove plug from outlet.
- Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.

SAVE THESE INSTRUCTIONS

CONTENTS

PRINCIPAL PARTS	4
ACCESSORIES	6
SLIDE ON THE SNAP-IN ACCESSORY BOX	7
CONNECTING THE MACHINE TO POWER SOURCE	8
CHANGING THE BULB	9
TWO-STEP PRESSER FOOT LEVER	10
ADJUSTING THE PRESSER FOOT PRESSURE	10
PRESSER FOOT SHANK	11
WINDING THE BOBBIN	12
INSERTING THE BOBBIN	13
CHANGING THE NEEDLE (SYSTEM 130/705H)	14
THREADING THE UPPER THREAD	15
BRINGING UP THE BOBBIN THREAD	16
THREAD TENSION	17
RAISE OR LOWER THE FEED DOG	18
REVERSE SEWING	19
CHANGING SEWING DIRECTIONS	19
REMOVING THE FABRIC	19
CUTTING THE THREAD	19
HOW TO CHOOSE YOUR PATTERN	20
MATCHING NEEDLE / FABRIC / THREAD	21
ZIG ZAG SEWING	22
STRAIGHT STITCHING AND NEEDLE POSITION	23
OVERLOCK STITCHES	24
BLIND HEM	25
ONE STEP BUTTONHOLES	26
LEFT AND RIGHT SIDE BALANCE FOR BUTTONHOLE	27
ZIPPERS AND PIPING	28
3-STEP ZIG-ZAG	29
STRETCH STITCH SELECTION	30
FREE MOTION DARNING	31
DARNING	32
QUILTING	33
MAINTENANCE	34
TROUBLESHOOTING GUIDE	35

Obsah je uzamčen

Dokončete, prosím, proces objednávky.

Následně budete mít přístup k celému dokumentu.



Proč je dokument uzamčen? Nahněvat Vás rozhodně nechceme. Jsou k tomu dva hlavní důvody:

- 1) Vytvořit a udržovat obsáhlou databázi návodů stojí nejen spoustu úsilí a času, ale i finanční prostředky. Dělali byste to Vy zadarmo? Ne*. Zakoupením této služby obdržíte úplný návod a podpoříte provoz a rozvoj našich stránek. Třeba se Vám to bude ještě někdy hodit.

**) Možná zpočátku ano. Ale vězte, že dotovat to dlouhodobě nelze. A rozhodně na tom nezbohatneme.*

- 2) Pak jsou tady „roboti“, kteří se přizívají na naší práci a „vysávají“ výsledky našeho úsilí pro svůj prospěch. Tímto krokem se jim to snažíme překazit.

A pokud nemáte zájem, respektujeme to. Urgujte svého prodejce. A když neuspějete, rádi Vás uvidíme!