



POWERED BY CARLSBRO

CSD120/CSD130
DIGITAL DRUM USER GUIDE

Congratulations!

Thank you for purchasing this digital drum set. The drum set has been Developed to act and play like a drum set but with greater ease. Before you use the instrument, we recommend you to read through this manual.

Taking care of Your Digital Drum Set

Location

- Do not expose the unit to the following Conditions to avoid deformation, discoloration or more serious damage.
- Direct sunlight.
- High temperature (near a heat)source, Or in car during the day time).
- Disconnect all cables before moving

Power Supply

- make sure to use the suitable AC adaptor, and also make sure the ac outlet voltage at your country matches the input voltage specified on the AC AC adaptor's label.
- Turn the power switch OFF When the Instrument is not in use.
- An AC adaptor should be unplugged from the AC outlet if the instrument is not be used for an extended period of time.
- Unplug the AC adaptor during electric storms.
- Avoid plugging the AC adaptor into
- The same AC outlet as appliance with high power consumption, such as electric heaters or ovens. Also avoid using multi-plug adaptors since these can result in reducing the sound quality, operation errors, and possibly damage.

Turn Power OFF When Making Connections

- To avoid damage to the instrument and other devices to which it is Connected, turn the power switches of all related device OFF prior to connecting or disconnecting cables.

Handling and Transport

- Never apply excessive force to the controls, connectors or other parts of the instrument.
- Always unplug cables by gripping the plug firmly, but not pulling on the cable.
- Disconnect all cables before moving The instrument.
- Physical shocks caused by dropping, bumping, or placing heavy objects on the instrument can result in scratches more serious damage.

Cleaning

- Clean the unit with a dry soft cloth.
- A Slightly damp cloth may be used to Remove stubborn grime and dirt.
- Never use cleaners such as alcohol or thinner.
- Avoid placing vinyl object on top of The unit (uinyl can stick to and discolor the surface).

Electrical Interference

- This instrument contains digital circuitry and may cause interference if placed too close to radio or television receivers. If this occurs, move the instrument further away from the affected equipment.

Contents

| | | | |
|---|----|---|----|
| 1. Assembly..... | 1 | Pad pan..... | 20 |
| Assemble the drum stand..... | 1 | Pad tuning..... | 20 |
| Assemble the pads..... | 3 | Establish user drum kit..... | 20 |
| Assemble the cymbals..... | 4 | Song setting..... | 21 |
| Assemble the module..... | 5 | Select song..... | 21 |
| Assemble the bass drum..... | 5 | Song playing..... | 21 |
| Assemble the pedal and bass drum..... | 6 | Accompaniment volume..... | 21 |
| Connect the pads..... | 6 | Drum sound of the song..... | 22 |
| 2. Fold the drum stand..... | 8 | Song tempo..... | 22 |
| Arrange the pad cables..... | 8 | Tempo setting and the metronome click...22 | |
| Fold the crash..... | 8 | Tempo..... | 22 |
| Fold the hi-hat and TOM1..... | 8 | Metronome..... | 22 |
| Fold the ride..... | 10 | 6. Record and replay..... | 23 |
| Fold TOM2 and TOM3..... | 10 | Record quickly..... | 23 |
| Fold the snare..... | 10 | Play the recorded song..... | 23 |
| Fold the whole set..... | 11 | 7. Set up..... | 23 |
| 3. Module function..... | 13 | Trigger sensitivity | 23 |
| Front panel..... | 13 | Crosstalk rejection..... | 24 |
| Rear panel..... | 14 | Trigger curve..... | 24 |
| display display..... | 15 | Save the Set-up..... | 25 |
| 4. Connect with external devices..... | 15 | Local control..... | 25 |
| Connect with audio system or drum speaker cabinet..... | 15 | 8. Reset setting..... | 26 |
| Connect with phone..... | 16 | 9. MIDI setting..... | 26 |
| Connect with MP3 or CD player..... | 16 | MIDI connection..... | 26 |
| Connect with PC..... | 17 | Connect with external audio source equipment | 26 |
| Connect with MIDI keyboard..... | 17 | Used as audio source equipment..... | 26 |
| Power supply..... | 17 | MIDI list..... | 27 |
| 5. Operation..... | 13 | 10. Trouble shooting | 28 |
| Power switch..... | 18 | 11. Audio source specification..... | 28 |
| Adjust the master volume..... | 18 | 12. Drum kit list | 29 |
| Select drum kit and reverb..... | 19 | 13. Voice list | 30 |
| Pad parameter setting..... | 19 | 14. GM percussion list..... | 36 |
| Select pad voice..... | 19 | 15. DEMO SONG list..... | 38 |
| Adjust pad volume..... | 20 | | |

Obsah je uzamčen

Dokončete, prosím, proces objednávky.

Následně budete mít přístup k celému dokumentu.



Proč je dokument uzamčen? Nahněvat Vás rozhodně nechceme. Jsou k tomu dva hlavní důvody:

- 1) Vytvořit a udržovat obsáhlou databázi návodů stojí nejen spoustu úsilí a času, ale i finanční prostředky. Dělali byste to Vy zadarmo? Ne*. Zakoupením této služby obdržíte úplný návod a podpoříte provoz a rozvoj našich stránek. Třeba se Vám to bude ještě někdy hodit.

**) Možná zpočátku ano. Ale vězte, že dotovat to dlouhodobě nelze. A rozhodně na tom nezbohatneme.*

- 2) Pak jsou tady „roboti“, kteří se přiživují na naší práci a „vysávají“ výsledky našeho úsilí pro svůj prospěch. Tímto krokem se jim to snažíme překazit.

A pokud nemáte zájem, respektujeme to. Urgujte svého prodejce. A když neuspějete, rádi Vás uvidíme!