


EJ09

Sewing Machine

User Manual

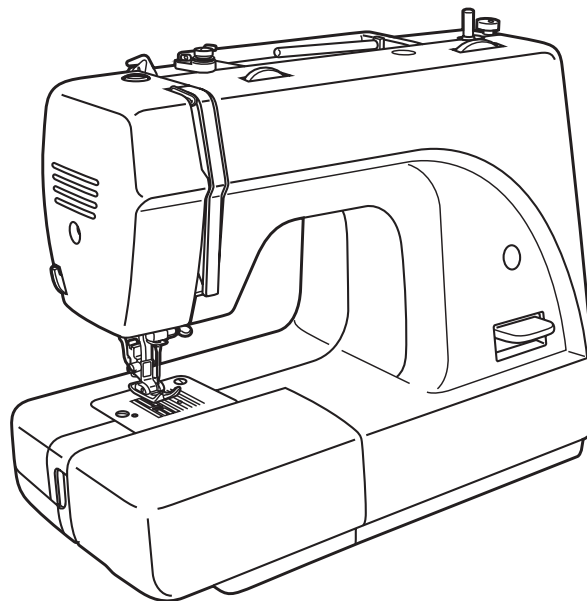

TESCO

IMPORTANT SAFETY GUIDE

Please follow all the precautions listed below for safety and to reduce the risk of fire, injury or electrical shock.

Read all the instructions before operating the appliance and keep them for future reference. If you pass the product on to a third party, include these instructions.

Always unplug the sewing machine from the mains supply when removing covers, lubricating, or when making any user or servicing adjustments mentioned in the instruction manual.

Do not unplug the unit by pulling on the cord. To unplug, grasp the plug, not the cord. Ensure there is adequate room to operate the unit.

Never operate this appliance if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or dropped into water. Return the appliance to a competent service centre for examination, repair, electrical or mechanical adjustment.

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of this appliance by a person responsible for their safety.

Children should be supervised to ensure that they do not play with the appliance

Do not use outdoors or in damp or wet conditions.

Before operating, ensure that the surface on which the unit is placed is stable.

Never operate the appliance with any air openings blocked. Keep all ventilation openings of the sewing machine and foot controller free from accumulations of lint, dust, and loose cloth.

Do not insert any object into ventilation slots.

Keep fingers away from all moving parts. Special care is required around the sewing machine needle.

Always use the proper needle plate. The wrong plate can cause the needle to break.

Do not use broken, deformed or blunt needles.

Do not pull or push fabric while stitching. It may deflect the needle causing it to break.

Switch the sewing machine off when making any adjustments in the needle area, such as threading the needle, changing needles, threading bobbins, changing the presser foot and the like.

Do not operate where aerosol spray products are being used or where oxygen is being administered.

This appliance is only for household use. Industrial or professional use will invalidate the warranty.

Do NOT use this appliance for any purpose not covered by the instructions.

THE APPLIANCE MUST NOT BE LEFT UNATTENDED WHILE IT IS CONNECTED TO THE SUPPLY MAINS.

ELECTRICAL INFORMATION

Before using this appliance ensure that the voltage of your electricity supply is the same as that indicated on the appliance.

The means of disconnecting this appliance from the mains supply is the mains plug. This should be unobstructed and readily operable at all times.

May we suggest that before you start to use your sewing machine, you discover its many features and advantages by going through this instruction book, step by step, while seated at your sewing machine.

CONTENTS

Safety Guide	Page 2	More about the pressure foot	Page 20
Details of the machine- Front View	Page 4	Matching the needle, fabric and thread	Page 21
Details of the machine- Rear View	Page 5	Sewing on buttons	Page 22
Accessories	Page 6	Sewing buttonholes	Page 23
Fitting the snap-in sewing table	Page 7	Attaching zippers and piping	Page 24
Connecting power	Page 8	3-step zig-zag sewing	Page 25
Attaching the needle	Page 9	Stitch selection	Page 26
The presser foot	Page 10	Smocking stitch	Page 27
Winding the bobbin	Page 11	Decorative and practical stitches	Page 28
Inserting the bobbin	Page 12	Patching	Page 29
Checking the bobbin tension	Page 12	Appliqué	Page 30
Threading the upper thread	Page 13	Monogramming and embroidering -1	Page 31
Bringing up the lower thread	Page 14	Monogramming and embroidering -2	Page 32
Basic sewing	Page 15	Maintenance -1 (Replacing the Light Bulb)	Page 33
Reverse sewing	Page 16	Maintenance -2 (Cleaning and Lubrication)	Page 34
Removing the work	Page 16	Troubleshooting	Page 35
More about Straight Stitching	Page 17	After Use	Page 36
Zig-Zag stitching	Page 18	Care	Page 36
Adjusting the upper thread tension	Page 19	Warranty	Page 36

Obsah je uzamčen

Dokončete, prosím, proces objednávky.

Následně budete mít přístup k celému dokumentu.



Proč je dokument uzamčen? Nahněvat Vás rozhodně nechceme. Jsou k tomu dva hlavní důvody:

- 1) Vytvořit a udržovat obsáhlou databázi návodů stojí nejen spoustu úsilí a času, ale i finanční prostředky. Dělali byste to Vy zadarmo? Ne*. Zakoupením této služby obdržíte úplný návod a podpoříte provoz a rozvoj našich stránek. Třeba se Vám to bude ještě někdy hodit.

**) Možná zpočátku ano. Ale vězte, že dotovat to dlouhodobě nelze. A rozhodně na tom nezbohatneme.*

- 2) Pak jsou tady „roboti“, kteří se přiživují na naší práci a „vysávají“ výsledky našeho úsilí pro svůj prospěch. Tímto krokem se jim to snažíme překazit.

A pokud nemáte zájem, respektujeme to. Urgujte svého prodejce. A když neuspějete, rádi Vás uvidíme!