

AUS GUTEM GRUND

GRUNDIG

COLOR TELEVISION

VISION 2 22-2930 T DVD

en

CONTENTS

4	SET-UP AND SAFETY
6	GENERAL INFORMATION
6	Special features of your television
6	Receiving digital stations
6	What is Common Interface?
8	CONNECTION/PREPURATION
8	Connecting the antenna and the mains cable
9	Inserting batteries in the remote control
10	OVERVIEW
10	Connections on the television set
11	Controls on the television set
11	Adjusting the inclination of the screen
12	The remote control for television mode
13	The remote control for DVD and data mode
15	SETTINGS
15	Searching for television stations
16	Changing stored channels for digital stations
18	Picture settings
19	Audio settings
21	TELEVISION OPERATION
21	Basic functions
22	Zoom function
23	Zapping function
23	Electronic TV guide
24	Changing the picture format
25	TELETEXT MODE
25	FLOF text and normal text mode
25	Additional functions
27	CONVENIENCE FUNCTIONS
27	Convenience functions
29	Parental control
31	Timer functions
33	DVD PLAYBACK
33	Special DVD features
34	Preparation
34	Inserting the disc
34	Removing the disc
35	Playing a track
36	Additional playback functions
38	Repeating a chapter, a track or the disc
38	Creating a playlist
39	S-VCD/VCD PLAYBACK
39	S-VCD/VCD features
39	PBC (playback control)
39	Playing a track
39	Picture search

CONTENTS

40	USB-MODE
40	The file formats
41	Connecting external data media
42	The file browser
43	Settings in the USB setup menu
43	Playback – Basic functions
44	Additional playback functions
46	USING EXTERNAL DEVICES
46	DVD player, DVD recorder, video recorder or set-top box
46	High definition – HD ready
46	Connecting a DVD player, DVD recorder, video recorder or set-top box
48	Headphones
49	Decoder or satellite receiver
50	Camcorder
51	PC MONITOR MODE
51	Connecting a PC
52	OPERATION WITH COMMON INTERFACE
52	Inserting the CA module
52	Access control for CA module and smart card
53	SPECIAL SETTINGS
53	Tuning digital television stations
54	Tuning analogue television stations
56	Changing stored channels for analogue stations
58	INFORMATION
58	Displaying signal information
58	Updating software
59	DVD SETTINGS
59	Setting the TV system (TV norm)
59	Selecting the TV format for your television
59	Selecting the language of the screen menu
60	Displaying and concealing the multi-angle symbol
60	Resetting the DVD to its original condition
60	Last playback position
61	Authorising the content of a DVD
61	Changing the password
61	Switching the dynamic range (volume range) on and off
62	Technical data
62	Service information for dealers
62	Environmental note
63	Troubleshooting
64	General information on laser devices

Obsah je uzamčen

Dokončete, prosím, proces objednávky.

Následně budete mít přístup k celému dokumentu.



Proč je dokument uzamčen? Nahněvat Vás rozhodně nechceme. Jsou k tomu dva hlavní důvody:

- 1) Vytvořit a udržovat obsáhlou databázi návodů stojí nejen spoustu úsilí a času, ale i finanční prostředky. Dělali byste to Vy zadarmo? Ne*. Zakoupením této služby obdržíte úplný návod a podpoříte provoz a rozvoj našich stránek. Třeba se Vám to bude ještě někdy hodit.

**) Možná zpočátku ano. Ale vězte, že dotovat to dlouhodobě nelze. A rozhodně na tom nezbohatneme.*

- 2) Pak jsou tady „roboti“, kteří se přizívají na naší práci a „vysávají“ výsledky našeho úsilí pro svůj prospěch. Tímto krokem se jim to snažíme překazit.

A pokud nemáte zájem, respektujeme to. Urgujte svého prodejce. A když neuspějete, rádi Vás uvidíme!