

DENON[®]

AVR-X2300W

INTEGRATED NETWORK AV RECEIVER

Owner's Manual

[Front panel](#)[Display](#)[Rear panel](#)[Remote](#)[Index](#)

Accessories	7
Inserting the batteries	8
Operating range of the remote control unit	8
Features	9
High quality sound	9
High performance	9
Easy operation	12
Part names and functions	13
Front panel	13
Display	16
Rear panel	18
Remote control unit	22

Connections

Connecting speakers	26
Speaker installation	26
Speaker connection	33
Speaker configuration and “Amp Assign” settings	37
Connecting a TV	48
Connection 1 : TV equipped with an HDMI connector and compatible with the ARC (Audio Return Channel)	49
Connection 2 : TV equipped with an HDMI connector and incompatible with the ARC (Audio Return Channel)	50
Connection 3 : TV equipped without an HDMI connector	51

Connecting a playback device	52
Connecting a set-top box (Satellite tuner/cable TV)	53
Connecting a DVD player or Blu-ray Disc player	54
Connecting a video camcorder or game console	55
Connecting an iPod or USB memory device to the USB port	56
Connecting an FM/AM antenna	58
Connecting to a home network (LAN)	60
Wired LAN	60
Wireless LAN	61
Connecting the power cord	62

Playback

Basic operation	64
Turning the power on	64
Selecting the input source	64
Adjusting the volume	65
Turning off the sound temporarily (Muting)	65
Playback a DVD player/Blu-ray Disc player	65



Playing an iPod	66	Listening to Internet Radio	90
Listening to music on an iPod	67	Listening to Internet Radio	91
iPod Browse Mode settings	68	Playing the last played Internet Radio station	92
Performing repeat playback	70	Using vTuner to add Internet Radio stations to favorites	93
Performing random playback	70	Playing back files stored on a PC and NAS	94
Playing a USB memory device	71	Applying media sharing settings	95
Playing files stored on USB memory devices	72	Playing back files stored on a PC and NAS	96
Listening to music on a Bluetooth device	74		
Playing music from Bluetooth device	75		
Pairing with other Bluetooth devices	77		
Reconnecting to this unit from a Bluetooth device	78		
Listening to FM/AM broadcasts	79		
Listening to FM/AM broadcasts	80		
Tuning in by entering the frequency (Direct Tune)	82		
RDS search	82		
PTY search	83		
TP search	84		
Radio Text	84		
Changing the tune mode (Tune Mode)	85		
Tuning in to stations and presetting them automatically (Auto Preset Memory)	85		
Presetting the current broadcast station (Preset Memory)	86		
Listening to preset stations	86		
Specify a name for the preset broadcast station (Preset Name)	87		
Skipping preset broadcast stations (Preset Skip)	88		
Cancelling Preset Skip	89		



Obsah je uzamčen

Dokončete, prosím, proces objednávky.

Následně budete mít přístup k celému dokumentu.



Proč je dokument uzamčen? Nahněvat Vás rozhodně nechceme. Jsou k tomu dva hlavní důvody:

- 1) Vytvořit a udržovat obsáhlou databázi návodů stojí nejen spoustu úsilí a času, ale i finanční prostředky. Dělali byste to Vy zadarmo? Ne*. Zakoupením této služby obdržíte úplný návod a podpoříte provoz a rozvoj našich stránek. Třeba se Vám to bude ještě někdy hodit.

**) Možná zpočátku ano. Ale vězte, že dotovat to dlouhodobě nelze. A rozhodně na tom nezbohatneme.*

- 2) Pak jsou tady „roboti“, kteří se přiživují na naší práci a „vysávají“ výsledky našeho úsilí pro svůj prospěch. Tímto krokem se jim to snažíme překazit.

A pokud nemáte zájem, respektujeme to. Urgujte svého prodejce. A když neuspějete, rádi Vás uvidíme!