

DENON[®]

AVR-X4200W

INTEGRATED NETWORK AV RECEIVER

Owner's Manual

[Front panel](#)[Display](#)[Rear panel](#)[Remote](#)[Index](#)

Upgrade	8
Accessories	9
Inserting the batteries	10
Operating range of the remote control unit	10
Features	11
High quality sound	11
High performance	14
Easy operation	17
Part names and functions	18
Front panel	18
Display	22
Rear panel	24
Remote control unit	28

Connections

Connecting speakers	32
Speaker installation	32
Speaker connection	42
Speaker configuration and “Amp Assign” settings	46
Connecting a TV	70
Connection 1 : TV equipped with an HDMI connector and compatible with the ARC (Audio Return Channel)	71
Connection 2 : TV equipped with an HDMI connector and incompatible with the ARC (Audio Return Channel)	72
Connection 3 : TV equipped without an HDMI connector	73

Connecting a playback device	74
Connecting a set-top box (Satellite tuner/cable TV)	75
Connecting a DVD player or Blu-ray Disc player	76
Connecting a Blu-ray Disc player compatible with the Denon Link HD function	77
Connecting a video camcorder or game console	78
Connecting a turntable	79
Connecting an iPod or USB memory device to the USB port	80
Connecting an FM/AM antenna	82
Connecting to a home network (LAN)	84
Wired LAN	84
Wireless LAN	85
Connecting an external control device	86
REMOTE CONTROL jacks	86
TRIGGER OUT jacks	87
Connecting the power cord	88

Playback

Basic operation	90
Turning the power on	90
Selecting the input source	90
Adjusting the volume	91
Turning off the sound temporarily (Muting)	91
Playback a DVD player/Blu-ray Disc player	91



Playing an iPod	92	Listening to Internet Radio	113
Listening to music on an iPod	93	Listening to Internet Radio	114
iPod Browse Mode settings	94	Playing the last played Internet Radio station	115
Performing repeat playback	96	Using vTuner to add Internet Radio stations to favorites	116
Performing random playback	96	Playing back files stored on a PC and NAS	117
Playing a USB memory device	97	Applying media sharing settings	118
Playing files stored on USB memory devices	98	Playing back files stored on a PC and NAS	119
Listening to music on a Bluetooth device	100	Listening to Pandora®	121
Playing music from Bluetooth device	101	Listening to Pandora®	122
Pairing with other Bluetooth devices	103	Creating a new station	124
Reconnecting to this unit from a Bluetooth device	104	Listening to an existing station	125
Listening to FM/AM broadcasts	105	Listening to created radio stations at random	125
Listening to FM/AM broadcasts	106	Giving feedback and managing stations	126
Tuning in by entering the frequency (Direct Tune)	107	Sign Out	127
Changing the tune mode (Tune Mode)	108	Listening to SiriusXM Internet Radio	128
Tuning in to stations and presetting them automatically (Auto Preset Memory)	108	Listening to SiriusXM Internet Radio	129
Presetting the current broadcast station (Preset Memory)	109	Sign Out	130
Listening to preset stations	109		
Specify a name for the preset broadcast station (Preset Name)	110		
Skipping preset broadcast stations (Preset Skip)	111		
Cancelling Preset Skip	112		



Obsah je uzamčen

Dokončete, prosím, proces objednávky.

Následně budete mít přístup k celému dokumentu.



Proč je dokument uzamčen? Nahněvat Vás rozhodně nechceme. Jsou k tomu dva hlavní důvody:

1) Vytvořit a udržovat obsáhlou databázi návodů stojí nejen spoustu úsilí a času, ale i finanční prostředky. Dělali byste to Vy zadarmo? Ne*. Zakoupením této služby obdržíte úplný návod a podpoříte provoz a rozvoj našich stránek. Třeba se Vám to bude ještě někdy hodit.

**) Možná zpočátku ano. Ale vězte, že dotovat to dlouhodobě nelze. A rozhodně na tom nezbohatneme.*

2) Pak jsou tady „roboti“, kteří se přiživují na naší práci a „vysávají“ výsledky našeho úsilí pro svůj prospěch. Tímto krokem se jim to snažíme překazit.

A pokud nemáte zájem, respektujeme to. Urgujte svého prodejce. A když neuspějete, rádi Vás uvidíme!