

# Instruction Manual

Thank you for purchasing this product.  
Before using this product please read the instructions carefully.

- \* Make sure that your Nintendo Switch is updated to the latest system firmware.
- \* This product does not support the following features.
  - Motion IR Camera
  - HD Rumble
  - NFC
- \* Wireless Connection ONLY (Not compatible when wired).

## Warning

 
 **Caution** To Parent/Guardian, Please read carefully

- This product contains small parts. Keep it away from children under 3 years old.
- Do not apply strong impact on this product.
- If the product needs cleaning, use only a soft dry cloth. Do not use any chemical agents like benzene or thinner.


## How to Connect \* Cannot be paired using a USB cable



1. Select [Controllers] → [Change Grip/Order] from the HOME Menu.

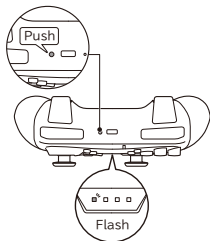

 2. Press and hold Sync Button for at least two seconds.  
\*Controller will now pair to this Nintendo Switch console automatically.

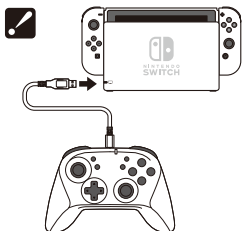


- Connect the controller to the Nintendo Switch Dock via USB connection to charge if the battery level is low.
- Cannot be paired using a USB cable.
- Press any button to use the product (except for L stick, L stick button, R stick, R stick button)
- Must be paired to each Nintendo Switch separately.
- Not compatible with the Nintendo Switch "Find Controllers" feature.
- Do not touch the L Stick or R Stick while pairing or re-connecting.

## Included



 Controller x1



USB cable (TypeC) ×1




Instruction Manual ×1




## Platform

 **Nintendo Switch** \* Not PC compatible

## Layout

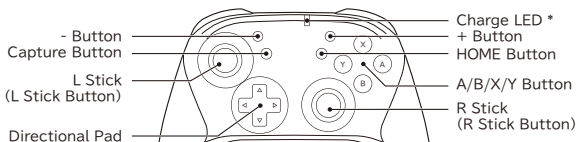

   \* During charge: LED turns ON  
Fully Charged: LED turns OFF  
Low Battery: LED blinks

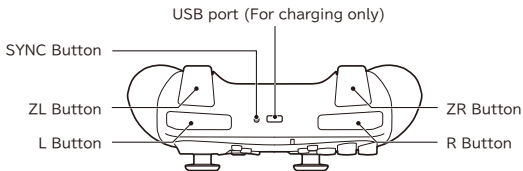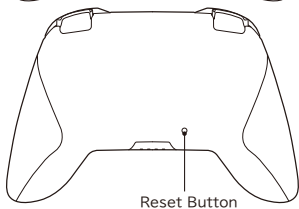


## How to Charge

1. Connect the Nintendo Switch AC Adapter to the Nintendo Switch Dock.
2. Connect Wireless Pad to Nintendo Switch Dock via USB cable (TypeC).


### Can also be charged while:

 - Nintendo Switch is not connected to the dock.
- Nintendo Switch is in sleep mode or turned off.

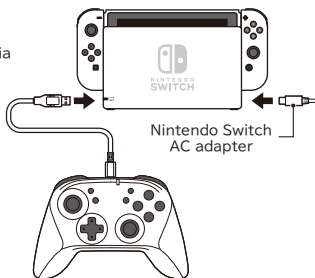

## Troubleshooting

 - Controller does not respond.  
→The battery may be low. Charge the controller accordingly.
  - Controller cannot be charged or does not respond on a full charge or reacts on its own.  
→Use a thin object to press the reset button on the bottom of the controller to reset and reconnect the controller. If problem still persists, please contact HORI customer support.
- \* L/R stick, Accelerometer, Gyro Sensor cannot be adjusted.

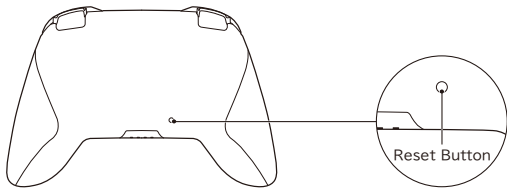

## Specification

Size	: (W) 6.4in (162mm) x (D) 2.3in (58mm) x (H) 4.3in (108mm)
Weight	: 6oz (170g)
Sensor	: Accelerometer / Gyro Sensor
Connection method:	Bluetooth®5.0

## Regarding Wireless Interference

This product uses a 2.4 GHz frequency band.

Other wireless devices may use the same frequency band.

To prevent radio interference with other wireless devices.

1. Please confirm that no other wireless devices are being used nearby.
2. In the unlikely event that radio interference occurs between this product and other wireless devices, change the area this product is used or turn the other wireless device off.

# Obsah je uzamčen

**Dokončete, prosím, proces objednávky.**

**Následně budete mít přístup k celému dokumentu.**



**Proč je dokument uzamčen? Nahněvat Vás rozhodně nechceme. Jsou k tomu dva hlavní důvody:**

- 1) Vytvořit a udržovat obsáhlou databázi návodů stojí nejen spoustu úsilí a času, ale i finanční prostředky. Dělali byste to Vy zadarmo? Ne\*. Zakoupením této služby obdržíte úplný návod a podpoříte provoz a rozvoj našich stránek. Třeba se Vám to bude ještě někdy hodit.

*\*) Možná zpočátku ano. Ale vězte, že dotovat to dlouhodobě nelze. A rozhodně na tom nezbohatneme.*

- 2) Pak jsou tady „roboti“, kteří se přiživují na naší práci a „vysávají“ výsledky našeho úsilí pro svůj prospěch. Tímto krokem se jim to snažíme překazit.

A pokud nemáte zájem, respektujeme to. Urgujte svého prodejce. A když neuspějete, rádi Vás uvidíme!