

DENON[®]

CEOL

NETWORK CD RECEIVER RCD-N9

Owner's Manual

You can print more than one page of a PDF onto a single sheet of paper.

[Front/Top panel](#)[Rear panel](#)[Remote control unit](#)[Index](#)

Accessories	6
Inserting the batteries	7
Operating range of the remote control unit	7
Features	8
Multiple music formats are supported, all in a compact form factor	8
Easy operation	8
Part names and functions	9
Front/Top panel	9
Rear panel	12
Remote control unit	14

Connections

Speaker connection	18
Connecting the speaker cables	18
Connecting the subwoofer	19
Connecting speakers	20
Connecting a digital device	21
Connecting an analog device	21
Connecting an iPod or USB memory device to the USB port	22
Connecting an FM/AM antenna	24
Connecting to a home network (LAN)	26
Wired LAN	26
Wireless LAN	27
Connecting the power cord	29



Playback

Basic operation	31
Turning the power on	31
Selecting the input source	31
Adjusting the volume	32
Turning off the sound temporarily	32
Playing CDs	33
Playing CDs	33
Playing tracks in a specific order (Program playback)	34
Playing DATA CDs	35
Playing files	36
Listening to Internet Radio	37
Listening to Internet Radio	38
Playing the last played Internet Radio station	39
Using vTuner to add Internet Radio stations to favorites	40
Playing back files stored on a PC and NAS	41
Applying media sharing settings	42
Playing back files stored on a PC and NAS	43

Listening to FM/AM broadcasts	45
Listening to FM/AM broadcasts	45
Changing the FM tuning mode (Tune Mode)	46
Automatically presetting FM stations (Auto Preset)	46
RDS search	47
PTY search	47
TP search	48
Radio Text	49
Favorite function	50
Registering stations or files to the favorites list	51
Calling stations or files from the favorites list	51
To switch between registered stations and files during playback	51
Deleting stations or files from the favorite list	51
Playing an iPod	52
Listening to music on an iPod	53
Setting operation mode (Browse iPod mode)	54
Charging the iPod/iPhone	55
Playing a USB memory device	56
Playing files stored on USB memory devices	57



Obsah je uzamčen

Dokončete, prosím, proces objednávky.

Následně budete mít přístup k celému dokumentu.



Proč je dokument uzamčen? Nahněvat Vás rozhodně nechceme. Jsou k tomu dva hlavní důvody:

- 1) Vytvořit a udržovat obsáhlou databázi návodů stojí nejen spoustu úsilí a času, ale i finanční prostředky. Dělali byste to Vy zadarmo? Ne*. Zakoupením této služby obdržíte úplný návod a podpoříte provoz a rozvoj našich stránek. Třeba se Vám to bude ještě někdy hodit.

**) Možná zpočátku ano. Ale vězte, že dotovat to dlouhodobě nelze. A rozhodně na tom nezbohatneme.*

- 2) Pak jsou tady „roboti“, kteří se přiživují na naší práci a „vysávají“ výsledky našeho úsilí pro svůj prospěch. Tímto krokem se jim to snažíme překazit.

A pokud nemáte zájem, respektujeme to. Urgujte svého prodejce. A když neuspějete, rádi Vás uvidíme!