

# TOSHIBA



43/49/50/55/58 UL2B Series

43/49/50/55/58/65 UL3B Series

40/43/49/50/55/58/65 UL30 Series

40/43/49/50/55/58/65 UL20 Series

43/50/55/58/65 V20 Series

40/43/49/50/55/58 U20 Series

43/50/55/58/65 UL6B Series

43/50/55/58/65 UL4B Series

43/50/58 UK4B Series

43/49/55/65 UL5B Series

75 VL5B Series

## OPERATING INSTRUCTIONS

## Contents

Environmental Information.....	2
Disposal Information.....	2
Standby Notifications.....	3
TV Control Switch & Operation (Optional).....	3
TV Control Button & Operation (Optional).....	3
Using Main TV Menu.....	4
Inserting the Batteries into the Remote.....	5
Power Connection.....	5
Antenna Connection.....	6
Remote Control.....	7
Remote Control- 2 (Optional).....	8
Connections.....	9
Switching On/Off - Control Switch (Optional).....	10
Switching On/Off - Control Button (Optional).....	10
First Time Installation.....	10
Media Playback via USB Input.....	12
USB Recording (Optional).....	12
Media Browser.....	14
FollowMe TV.....	14
CEC.....	14
Quick AI.....	15
Using the Channel List.....	25
Configuring Parental Settings.....	25
Electronic Programme Guide.....	25
Teletext Services.....	26
Software Upgrade.....	26
Troubleshooting & Tips.....	26
PC Input Typical Display Modes.....	27
AV and HDMI Signal Compatibility.....	28
Supported DVI Resolutions.....	31
Connectivity.....	32
Apps.....	35
Internet Browser.....	36
HBTV System.....	36
Smart Center.....	37
Alexa Ready (Optional).....	38
Alexa Ready (Optional).....	39
Google Assistant.....	40

## Environmental Information

This television is designed to be environment friendly. To reduce energy consumption, you can follow these steps:

If you set the **Energy Saving** to **Minimum**, **Medium**, **Maximum** or **Auto** the TV will reduce the energy consumption accordingly. Set as **Off** to turn this setting off. If you like to set the **Backlight** to a fixed value set as **Custom** and adjust the **Backlight** (will be located under the **Energy Saving** setting) manually using Left or Right buttons on the remote.

**Note:** Available **Energy Saving** options may differ depending on the selected **Mode** in the **Settings>Picture** menu.

The **Energy Saving** settings can be found in the **Settings>Picture** menu. Note that some picture settings will be unavailable to be changed.

You can also turn the screen off using the **Screen Off** option, if you want to hear the sound only and don't need to watch. If pressed Right button or Left button consecutively **Screen Off** option will be selected and "**Screen will be off in 15 seconds.**" message will be displayed on the screen. Select **Proceed** and press **OK** to turn the screen off immediately. If you don't press any button, the screen will be off in 15 seconds. Press any button on the remote or on the TV to turn the screen on again.

**Note:** **Screen Off** option is not available if the **Mode** is set to **Game**.

When the TV is not in use, please switch off or disconnect the TV from the mains plug. This will also reduce or stop the energy consumption.

## Disposal Information

### Disposal...

The following information is only for EU-member states:

#### Disposal of products

The crossed out wheeled dust bin symbol indicates that products must be collected and disposed of separately from household waste. Integrated batteries and accumulators can be disposed of with the product. They will be separated at the recycling centres.

The black bar indicates that the product was placed on the market after August 13, 2005.

By participating in separate collection of products and batteries, you will help to assure the proper disposal of products and batteries and thus help to prevent potential negative consequences for the environment and human health.

For more detailed information about the collection and recycling programmes available in your country, please contact your local city office or the shop where you purchased the product.



#### Disposal of batteries and/or accumulators

The crossed out wheeled dust bin symbol indicates that batteries and/or accumulators must be collected and disposed of separately from household waste.

If the battery or accumulator contains more than the specified values of lead (Pb), mercury (Hg), and/or cadmium (Cd) defined in the European Battery Directive, then the chemical symbols for lead (Pb), mercury (Hg) and/or cadmium (Cd) will appear below the crossed out wheeled dust bin symbol.

By participating in separate collection of batteries, you will help to assure the proper disposal of products and batteries and thus help to prevent potential negative consequences for the environment and human health. For more detailed information about the collection and recycling programmes available in your country, please contact your local city office or the shop where you purchased the product.



# Obsah je uzamčen

**Dokončete, prosím, proces objednávky.**

**Následně budete mít přístup k celému dokumentu.**



**Proč je dokument uzamčen? Nahněvat Vás rozhodně nechceme. Jsou k tomu dva hlavní důvody:**

1) Vytvořit a udržovat obsáhlou databázi návodů stojí nejen spoustu úsilí a času, ale i finanční prostředky. Dělali byste to Vy zadarmo? Ne\*. Zakoupením této služby obdržíte úplný návod a podpoříte provoz a rozvoj našich stránek. Třeba se Vám to bude ještě někdy hodit.

*\*) Možná zpočátku ano. Ale vězte, že dotovat to dlouhodobě nelze. A rozhodně na tom nezbohatneme.*

2) Pak jsou tady „roboti“, kteří se přiživují na naší práci a „vysávají“ výsledky našeho úsilí pro svůj prospěch. Tímto krokem se jim to snažíme překazit.

A pokud nemáte zájem, respektujeme to. Urgujte svého prodejce. A když neuspějete, rádi Vás uvidíme!