

 


Wifi Doorbell


USER'S MANUAL



Introduction

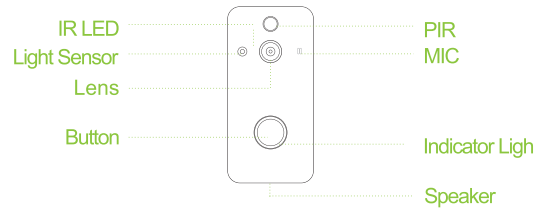


- Infrared light** In low light, it will enable infrared light to increase the environment brightness
- Light Sensor** Enable the infrared light when illumination is below 2lux
- Microphone** Capture voice and Intercom
- Push Button** Wake up the device and inform you when someone is visiting
- PIR** Detect movement and send alarm to smart phone
- Lens** Captures video images
- Indicator Light** Red Light flash slowly: Waiting for Wi-Fi Configuration
Blue light flash slowly: Working State
Red blue light flash off and on: Wi-Fi Connecting Failed
- Speaker** Emit system sound and Intercom

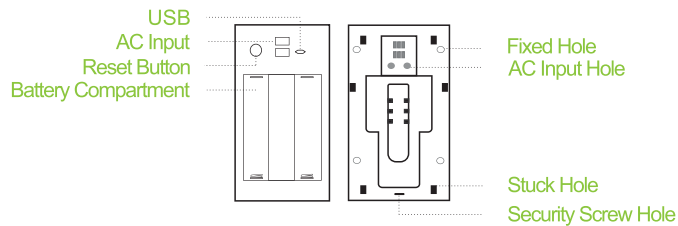 


- USB** Use this port to recharge batteries.
- AcInput** Power is supplied to the equipment by installing the AC input supply hole on the mounting bracket (for retrofit applications only).
- ResetButton** Press for 5 seconds to restore factory settings.
- Battery Compartment** Mounting 18650 specification battery.
- Fixed Hole** Fit the support on the wall with the mounting screws from the mounting kit.
- ACInput Hole** The power supply of the equipment can be supplied by connecting the hole and the AC power supply on the wall.
- Stuck Hole** Mounting the equipment onto the bracket.
- Security Screw Hole** Mounting the security screw on the fittings to prevent the equipment from being removed.

 Installation Guide

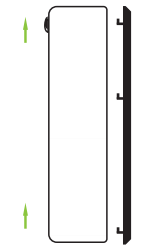


As shown, remove the back panel

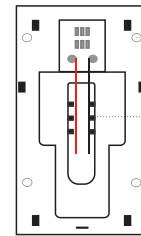 

Drill holes (4mm drill bit), insert plugs and fix the back panel on the wall with screws.

 Fixed the AC (12-24v) power line with screws (if retrofitting only)

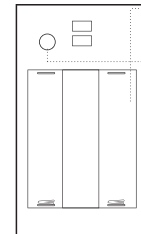

Remove the battery cover and install two 18650 batteries

Reset Button, long press for 5 seconds to reset the product

Replace the battery cover and back panel. Install screw into security screw hole to complete the installation.

Chime Pairing

- Code:** ① Press Volume key for 5 seconds until you hear a "Ding" sound and the receiver LED light flashing at the same time.
② Press the Doorbell push button three times within 8 seconds and code successfully.

Reset: Long press the chime forwarder key for 5 seconds until you hear "Ding" sound and the receiver light LED Light flashes at the same time.

*Please read this manual carefully and keep it in a safe place for future reference

Obsah je uzamčen

Dokončete, prosím, proces objednávky.

Následně budete mít přístup k celému dokumentu.



Proč je dokument uzamčen? Nahněvat Vás rozhodně nechceme. Jsou k tomu dva hlavní důvody:

- 1) Vytvořit a udržovat obsáhlou databázi návodů stojí nejen spoustu úsilí a času, ale i finanční prostředky. Dělali byste to Vy zadarmo? Ne*. Zakoupením této služby obdržíte úplný návod a podpoříte provoz a rozvoj našich stránek. Třeba se Vám to bude ještě někdy hodit.

**) Možná zpočátku ano. Ale vězte, že dotovat to dlouhodobě nelze. A rozhodně na tom nezbohatneme.*

- 2) Pak jsou tady „roboti“, kteří se přiživují na naší práci a „vysávají“ výsledky našeho úsilí pro svůj prospěch. Tímto krokem se jim to snažíme překazit.

A pokud nemáte zájem, respektujeme to. Urgujte svého prodejce. A když neuspějete, rádi Vás uvidíme!