

Cattara

- ENG Gas heater
- CZ Plynové topení
- SK Plynový ohrievač

„HEAT & COOK“



1700 W	108 g/h	CERAMIC BURNER	FULL METAL	EASY CARRY
PIEZO	CP 250	max ø 23 cm	275 × 275 × 180 cm	1,83 kg

Art. No. 13 597

#	ENG	CZ	SK
1	Handle	Rukojeť	Rukoväť
2	Handle lock latch	Západka rukojeti	Západka rukoväte
3	Cooling fins	Chladicí žebra	Chladiace rebrá
4	Gas cartridge cover	Kryt plynové kartuše	Kryt plynové kartuše
5	Heating reflector	Reflektor	Reflektor
6	Control / Ignition knob	Ovládací / zapalovací knoflík	Ovládaci / zapalovacie gombík
7	Steel grid	Ocelová mřížka	Oceľová mriežka
8	Ceramic infra plate	Keramická infra deska	Keramická infra doska
9	Ignition needle	Zapalovací jehla	Zapaľovacie ihla
10	Gas tube	Plynová trubice	Plynová trubica



Insert manual

Combined heater and food warmer for propane-butane, suitable for Outdoor use.

Suitable space for CP250 (220g) gas cartridge.

All connected gases must meet the requirements for the ČSN EN 417 standard. Piezoelectric ignition and gas flow regulation are used for convenient and fast use.

Usefull for food heating in a pot (max. Diameter 23 cm).

The all-metal construction ensures maximum durability, the handle on the upper part facilitates good handling.

Technical data

Heat output	1.7 kW
Gas consumption	108 g/h
Gas Type	LPG
Ignition	piezo
Dimensions	275 x 275 x 180 mm
Model	BDZQ-108-J1000

Operation conditions

The device is designed for camping purposes, for operation in an outdoor environment.

Device consumes oxygen during operation and in unventilated or closed rooms, the user can be seriously endangered due to lack of oxygen and increased CO₂ concentrations!

The minimum distance between the appliance and other objects must be at least 0.5 m.

Do not expose the gas cartridge to temperatures above 50°C or to direct sunlight.

Check the device regularly, especially before use. Check for leaks, the cleanliness of the nozzle, the cleanliness of the piezo lighter and the magnetic contact surface for the cartridge connection and the correct functioning of the device.

Before use

- Open cartridge cover on the back side.
- Check the valve rubber seal.
- Check, and if necessary, remove any dirt from the cartridge magnetic connection.
- On the front, check that the burner and piezo lighter are not dirty.
- Device is equipped with an overpressure protection for 0.45-0.7 MPa. The gas cartridge cannot be connected if its pressure increases, eg due to a higher temperature.

Gas cartridge connection

- Open the rear cover for the gas cartridge.
- Make sure that the control valve is closed (close by turning it all the way to the right).
- Remove the protective cap from the gas cartridge.
- Insert the cartridge so that its valve is placed in the valve head of device and turn it, so that the locking lever (located on the valve) fits into the groove of the cartridge.
- Cartridge is attached to device via magnetic connection.
- Close the cartridge back cover.
- *If the control valve is not completely closed, the cartridge cannot be connected!*
- *Never cover the ventilation openings of the cartridge compartment!*
- *Always connect only suitable gas cartridges, keep the cartridges cool and out of direct sunlight before use!*

Ignition and extinguishing

- Open the gas valve using rotary controller to the left, in the extreme position the gas will ignite (click).
- The burning intensity can be adjusted by closing (right) or opening (left) the valve using the control knob.
- The burner is extinguished by closing the valve completely using the control knob (by turning it to the right as far as it will go).
- *Never look directly into the device during ignition!*
- *Do not manipulate the device while the gas is burning.*
- *When extinguishing, always make sure that the flame has really gone out!*

Disconnecting or replacing the cartridge

- When the device has cooled down, open the back cover of the cartridge.
- Remove the cartridge and, if necessary, replace it with a new one and close the cover again.
- *The gas cartridge can only be replaced outdoors, away from any source of ignition and out of reach of other persons.*
- *The cartridge can only be replaced with the valve closed (selector all the way to the right).*

Food heating

- For proper use, it is necessary to lower the handle to the support position (fully down) using the locking latch on the side of the device.
- Place the device on a level surface.
- After ignition, it is possible to place a pan / pot for heating the food (max. Diameter 23 cm).
- *The appliance must not be spilled on with food, do not overfill pot! (there is a risk of fire extinguishing and clogging of the nozzle)*

Obsah je uzamčen

Dokončete, prosím, proces objednávky.

Následně budete mít přístup k celému dokumentu.



Proč je dokument uzamčen? Nahněvat Vás rozhodně nechceme. Jsou k tomu dva hlavní důvody:

- 1) Vytvořit a udržovat obsáhlou databázi návodů stojí nejen spoustu úsilí a času, ale i finanční prostředky. Dělali byste to Vy zadarmo? Ne*. Zakoupením této služby obdržíte úplný návod a podpoříte provoz a rozvoj našich stránek. Třeba se Vám to bude ještě někdy hodit.

**) Možná zpočátku ano. Ale vězte, že dotovat to dlouhodobě nelze. A rozhodně na tom nezbohatneme.*

- 2) Pak jsou tady „roboti“, kteří se přiživují na naší práci a „vysávají“ výsledky našeho úsilí pro svůj prospěch. Tímto krokem se jim to snažíme překazit.

A pokud nemáte zájem, respektujeme to. Urgujte svého prodejce. A když neuspějete, rádi Vás uvidíme!