


hama[®]
THE SMART SOLUTION

Hama GmbH & Co KG
86652 Monheim / Germany

Service & Support

 www.hama.com

 +49 9091 502-0

D GB



All listed brands are trademarks of the corresponding companies.
Errors and omissions excepted, and subject to technical changes.
Our general terms of delivery and payment are applied.

hama[®]
THE SMART SOLUTION


00186416

Radio Alarm Clock "Black Line"
Funkwecker



GB	Operating Instructions		
D	Bedienungsanleitung	Használati útmutató	H
F	Mode d'emploi	Návod k použití	CZ
E	Instrucciones de uso	Návod na použitie	SK
RUS	Руководство по эксплуатации	Manual de instruções	P
I	Istruzioni per l'uso	Manual de utilizare	RO
NL	Gebruiksaanwijzing	Bruksanvisning	S
GR	Οδηγίες χρήσης	Käyttöohje	FIN
PL	Instrukcja obsługi	Работна инструкция	BG

00186416/04.20

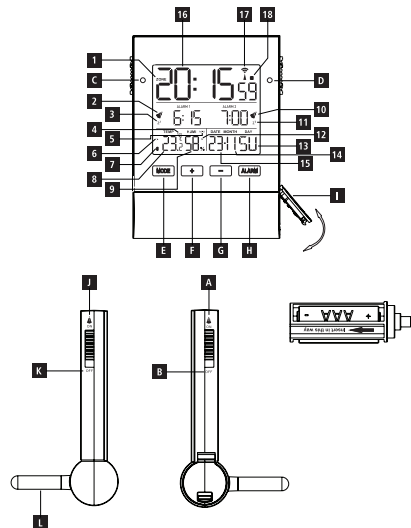

Controls and Displays

1. Time zone
2. Alarm 1
3. Alarm 1 snooze
4. Max./min. for room temperature
5. Max./min. for room humidity
6. Temperature trend
7. Battery symbol
8. Room temperature
9. Room humidity
10. Alarm 2
11. Alarm 2 snooze
12. Humidity trend
13. Day of the week
14. Month
15. Date
16. Time
17. Radio symbol
18. Summer time S

- A. ☞ slide switch: Alarm 2 on
- B. Slide switch: Alarm 2 off
- C. Red indicator light if Alarm 1 is activated
- D. Red indicator light if Alarm 2 is activated
- E. Mode = manual setting
- F. + button: increases the current set value / displays **MAX/MIN** values
- G. - button: reduces the current set value / switches between Celsius and Fahrenheit
- H. Alarm button: sets Alarm time 1 and Alarm time 2
- I. Battery compartment (battery holder inside)
- J. ☞ slide switch: Alarm 1 on
- K. Slide switch: Alarm 1 off
- L. Base
- M. Snooze/Light sensor = temporarily interrupts the alarm / activates the backlight

1. Explanation of Warning Symbols and Notes

Warning

This symbol is used to indicate safety instructions or to draw your attention to specific hazards and risks.



Note

This symbol is used to indicate additional information or important notes.



2. Package Contents

- Blackline radio-controlled alarm clock
- 3 AAA batteries
- These operating instructions

3. Safety Notes

- The product is intended for private, non-commercial use only.
- Use the product for its intended purpose only.
- Protect the product from dirt, moisture and overheating, and only use it in a dry environment.
- Do not use the product in the immediate vicinity of heaters or other heat sources or in direct sunlight.
- Keep this product, as all electrical products, out of the reach of children!
- Do not operate the product outside the power limits given in the specifications.
- Do not use the product in areas where the use of electronic devices is not permitted.
- Do not use the product in moist environments and avoid splashes.
- Do not place the product near interference fields, metal frames, computers, TVs, etc. Electronic devices and window frames can negatively affect the product's functionality.
- Do not drop the product and do not expose it to any major shocks.
- Do not modify the product in any way. Doing so voids the warranty.
- Keep the packaging material out of the reach of children due to the risk of suffocation.
- Do not open the device or continue to operate it if it becomes damaged.
- Do not attempt to service or repair the product yourself. Leave any and all service work to qualified experts.

Warning – Batteries

- When inserting batteries, note the correct polarity (+ and - markings) and insert the batteries accordingly. Failure to do so could result in the batteries leaking or exploding.
- Only use batteries (or rechargeable batteries) that match the specified type.
- Before you insert the batteries, clean the battery contacts and the polar contacts.



- Do not allow children to change batteries without supervision.
- Do not mix old and new batteries or batteries of a different type or make.
- Remove the batteries from products that are not being used for an extended period (unless these are being kept ready for an emergency).
- Do not short-circuit batteries.
- Do not charge batteries.
- Do not throw batteries in a fire.
- Keep batteries out of the reach of children.
- Never open, damage or swallow batteries or allow them to enter the environment. They can contain toxic, environmentally harmful heavy metals.
- Immediately remove and dispose of dead batteries from the product.
- Avoid storing, charging or using the device in extreme temperatures and extremely low atmospheric pressure (for example, at high altitudes).

4. Getting started


4.1 Inserting the batteries

- Open the battery compartment (I) and remove the battery holder. Insert three AAA batteries with the correct polarity and slide the battery holder into the battery compartment. Close the battery compartment (I).
- Insert the battery holder as indicated in the picture.

4.2 Replacing the battery

- Open the battery compartment (I) and remove the battery holder. Remove and properly dispose of the depleted batteries, and insert three new AAA batteries with the correct polarity. Then close the battery compartment cover.

4.3 Low battery capacity

When the battery symbol  (7) appears on the display, it indicates that the battery capacity is very low. Replace the batteries immediately.

4.4 Mounting

- Use the base (L) to position the alarm clock on a level surface.

5. Operation

Note

- Hold the + button (F) or the - button (G) to select the values faster

5.1. Basic and manual settings

Automatic setting using the DCF signal Once you have inserted the batteries, the display is switched on, an acoustic signal sounds and the alarm clock automatically starts searching for a DCF radio signal. During the search, the radio icon (17) will flash. This process can take 3 to 5 minutes.

- When the wireless signal is received, the date and time are automatically set.

Display	Searching for the DCF signal
 Display flashing	Active
 Display steady	Successful - signal reception
Not displayed	Inactive

- If the station still does not receive a signal, press and hold the - button (G) for approx. 3 seconds to start the manual search for the DCF signal. The radio icon (17) starts to flash.

Note – Time settings

- The search process takes around 7 minutes. If the search fails, it ends and is repeated at the next full hour. The radio icon (8) goes out.
- In the meantime, however, you can set the time and the date manually.
- The clock automatically continues to search for the DCF signal on a daily basis (between 1 am and 5 am) to correct any deviations. If the signal is received successfully, the manually set time and date are overwritten.

Obsah je uzamčen

Dokončete, prosím, proces objednávky.

Následně budete mít přístup k celému dokumentu.



Proč je dokument uzamčen? Nahněvat Vás rozhodně nechceme. Jsou k tomu dva hlavní důvody:

1) Vytvořit a udržovat obsáhlou databázi návodů stojí nejen spoustu úsilí a času, ale i finanční prostředky. Dělali byste to Vy zadarmo? Ne*. Zakoupením této služby obdržíte úplný návod a podpoříte provoz a rozvoj našich stránek. Třeba se Vám to bude ještě někdy hodit.

**) Možná zpočátku ano. Ale vězte, že dotovat to dlouhodobě nelze. A rozhodně na tom nezbohatneme.*

2) Pak jsou tady „roboti“, kteří se přiživují na naší práci a „vysávají“ výsledky našeho úsilí pro svůj prospěch. Tímto krokem se jim to snažíme překazit.

A pokud nemáte zájem, respektujeme to. Urgujte svého prodejce. A když neuspějete, rádi Vás uvidíme!