

hama[®]
THE SMART SOLUTION

00186321
00186322
00136250
00136251
00136252

Radio Controlled Clock RC 660 Funkwecker

hama[®]

Hama GmbH & Co KG
86652 Monheim / Germany

Service & Support

 www.hama.com

 +49 9091 502-115

 
D GB





www.hama.com/nep

All listed brands are trademarks of the corresponding companies.
Errors and omissions excepted, and subject to technical changes.
Our general terms of delivery and payment are applied.

00186321_22_00136250_52/02.19

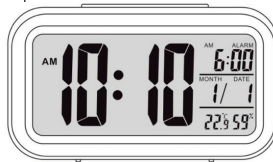

Operating Instructions	GB
Bedienungsanleitung	D
Mode d'emploi	F
Instrucciones de uso	E
Руководство по эксплуатации	RUS
Istruzioni per l'uso	I
Gebruiksaanwijzing	NL
Οδηγίες χρήσης	GR
Instrukcja obsługi	PL
Használati útmutató	H
Návod k použití	CZ
Návod na použitie	SK
Manual de instruções	P
Manual de utilizare	RO
Bruksanvisning	S
Käyttöohje	FIN
Работна инструкция	BG

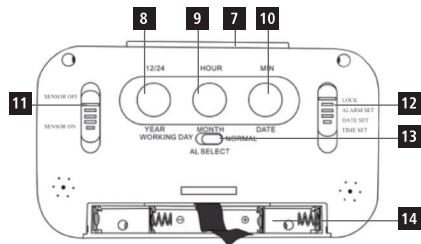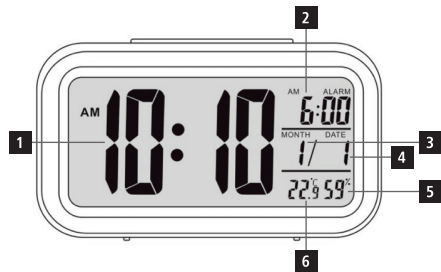  

Controls and Displays

1. Time
2. Alarm time
3. Month
4. Day
5. Room humidity
6. Room temperature
7. **SNOOZE / LIGHT** button / twilight sensor
= activate the backlight (approx. 10 seconds) / stop the alarm for 5 minutes
8. **12/24 / YEAR** button
= toggle 12/24-hour time format / set the year
9. **HOUR/MONTH** button
= activate/deactivate the alarm / Display the set alarm time / set the hour/month
10. **MIN/DATE** button
= activate/deactivate manual radio signal reception / switch between °C and °F / set minute/date
11. **SENSOR OFF/ON** slide switch
= activate/deactivate the twilight sensor
12. **LOCK** slide switch
= change between normal mode and set modes: alarm, date and time
13. **ALARM SELECT** slide switch
= select alarm mode
14. Battery compartment

Display	Meaning	Display	Meaning
	Radio signal	ALW	Workday alarm
	Weak radio signal		Alarm 1 time
PM	12:00-23:59 (12-hour time)		Alarm 2 time
AM	0:00-11:59 (12-hour time)	Zz	Snooze function
D	Day		Summer time
M	Month		

1. Explanation of Warning Symbols and Notes

Warning

This symbol is used to indicate safety instructions or to draw your attention to specific hazards and risks.



Note

This symbol is used to indicate additional information or important notes.



2. Package Contents

- Radio Controlled Alarm Clock RC 660
- 3 x AAA batteries
- These operating instructions

3. Safety Notes

- The product is intended for private, non-commercial use only.
- Protect the product from dirt, moisture and overheating, and only use it in a dry environment.
- Do not use the product in areas where the use of electronic devices is not permitted.
- Do not put the product near interference fields, metal frames, computers, TVs, etc. Electronic devices and window frames can negatively affect the product's functionality.
- Do not drop the product and do not expose it to any major shocks.
- Do not attempt to service or repair the product yourself. Leave any and all

- service work to qualified experts.
- Do not modify the product in any way. Doing so voids the warranty.
- Keep the packaging material out of the reach of children due to the risk of suffocation.
- Dispose of packaging material immediately according to locally applicable regulations.

Warning – Batteries



- Immediately remove and dispose of dead batteries from the product.
- Only use batteries (or rechargeable batteries) that match the specified type.
- Do not mix old and new batteries or batteries of a different type or make.
- When inserting batteries, note the correct polarity (+ and - markings) and insert the batteries accordingly. Failure to do so could result in the batteries leaking or exploding.
- Do not overcharge batteries.
- Keep batteries out of the reach of children.
- Do not short circuit the batteries/rechargeable batteries and keep them away from uncoated metal objects.

4. Getting Started

- Move the **LOCK** slide switch (12) to the **LOCK** position to select normal mode.

4.1. Inserting the batteries

- Open the battery compartment (14), insert three AAA batteries with the correct polarity and close the battery compartment (14).

4.2. Replacing the batteries


- Open the battery compartment (14), remove and properly dispose of the dead batteries and insert three new AAA batteries with the correct polarity. Replace the battery compartment cover.



5. Operation

Note

- Immediate Hold down the **12/24/ YEAR** button (8), **HOUR/ MONTH** button (9) or the **MIN/ DATE** button (10) to select the values faster. ly remove and dispose of dead batteries from the product.

5.1. Automatic date/time setting using the DCF signal

- Once you have inserted the batteries, the display is switched on, an acoustic signal sounds and the alarm clock automatically starts searching for a DCF radio signal. During the search, the radio icon  will flash. This process can take 3 to 5 minutes.
- When the wireless signal is received, the date and time are automatically set.


Display	Searching for the DCF signal
 Display flashing	Active
 Display steady (not flashing)	Successful – signal is being received
Not displayed	Inactive – no signal reception

- Press and hold the **MIN/ DATE** button (10) for approx. 3 seconds to start a manual search for the DCF radio signal.

Note – Time settings

- If, during initial setup of the device, no DCF radio signal is received within the first few minutes, the search is aborted. The radio icon will go out.
- If there are reception problems, we recommend leaving the clock to sit overnight, since interference is generally less at night.
- In the meantime, you can start a manual search for the DCF radio signal at another location or you can manually set the time and date.
- The clock automatically continues to search for the DCF signal every hour. If the signal is received successfully, the manually set time and date are overwritten.

 Note – Summer time

The clock automatically switches to summer time.  appears on the display as long as summer time is activated.

5.2. Manually setting the date/time

- Move the **LOCK** slide switch (12) to the **TIME SET** position to manually set the time (1).
- Set the hour by pressing the **HOUR/ MONTH** button (9).
- Set the minute by pressing the **MIN/ DATE** button (10).
- Move the **LOCK** slide switch (12) to the **LOCK** position to save your settings and return to normal mode.

Date

- Move the **LOCK** slide switch (12) to the **DATE SET** position to manually set the date (3/4).
- Set the year by pressing the **12/24/ YEAR** button (8).
- Set the month by pressing the **HOUR/ MONTH** button (9).
- Set the day by pressing the **MIN/DATE** button (10).
- Move the **LOCK** slide switch (12) to the **LOCK** position to save your settings and return to normal mode.

Selecting 12 or 24-hour format





- Press the **12/24/ YEAR** button (8) to switch between the 12 and 24-hour formats (1/2).

5.3. Temperature display

- Press the **MIN/ DATE** button (10) to choose between °C and °F for the temperature display (6).

5.4. Alarm

Setting the alarm time

- Move the **LOCK** slide switch (12) to the **ALARM SET** position to manually set the alarm time (2).
- Repeatedly press the **12/24/YEAR** button (8) to set the time of alarm 1 (2) or alarm 2 (2).
- Either the  symbol or the  symbol is displayed accordingly.
- Set the hour by pressing the **HOUR/ MONTH** button (9).
- Set the minute by pressing the **MIN/ DATE** button (10).
- If necessary, press the **12/24/YEAR** button (8) again to set the other alarm.
- Move the **LOCK** slide switch (12) to the **LOCK** position to save your settings and return to normal mode.
- Repeatedly press the **HOUR/MONTH** button (9) to display the set time of alarm 1 (2) or alarm 2 (2).
- The corresponding symbol ( or ) is displayed for about 10 seconds.

Obsah je uzamčen

Dokončete, prosím, proces objednávky.

Následně budete mít přístup k celému dokumentu.



Proč je dokument uzamčen? Nahněvat Vás rozhodně nechceme. Jsou k tomu dva hlavní důvody:

- 1) Vytvořit a udržovat obsáhlou databázi návodů stojí nejen spoustu úsilí a času, ale i finanční prostředky. Dělali byste to Vy zadarmo? Ne*. Zakoupením této služby obdržíte úplný návod a podpoříte provoz a rozvoj našich stránek. Třeba se Vám to bude ještě někdy hodit.

**) Možná zpočátku ano. Ale vězte, že dotovat to dlouhodobě nelze. A rozhodně na tom nezbohatneme.*

- 2) Pak jsou tady „roboti“, kteří se přiživují na naší práci a „vysávají“ výsledky našeho úsilí pro svůj prospěch. Tímto krokem se jim to snažíme překazit.

A pokud nemáte zájem, respektujeme to. Urgujte svého prodejce. A když neuspějete, rádi Vás uvidíme!