



hama®

THE SMART SOLUTION

00
186413

Radio alarm clock


"Roundly"

Funkwecker

GB Operating Instructions
D Bedienungsanleitung
F Mode d'emploi
E Instrucciones de uso
RUS Руководство по эксплуатации

Istruzioni per l'uso
Gebruiksaanwijzing
Οδηγίες χρήσης
Instrukcja obsługi
Használati útmutató
Návod k použití
Návod na použitie
Manual de instruções
Manual de utilizare
Bruksanvisning
Käyttöohje
Работна инструкция

I
NL
GR
PL
H
CZ
SK
P
RO
S
FIN
BG

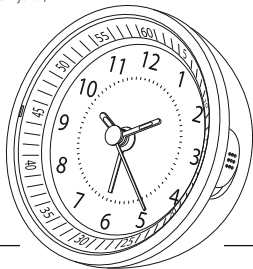

1. Explanation of Warning Symbols and Notes

Warning



This symbol is used to indicate safety instructions or to draw your attention to specific hazards and risks.

Note



This symbol is used to indicate additional information or important notes.

2. Package Contents

- „Roundly“ radio-controlled alarm clock
- 1 AA battery
- These operating instructions

3. Safety Instructions

- The product is intended for private, non-commercial use only.
- Protect the product from dirt, moisture and overheating, and only use it in a dry environment.
- Do not use the product in areas where the use of electronic devices is not permitted.
- Do not place the product near interference fields, metal frames, computers, TVs, etc. Electronic devices and window frames can negatively affect the product's functionality.
- Do not drop the product and do not expose it to any major shocks.
- Do not attempt to service or repair the product yourself. Leave any and all service work to qualified experts.
- Do not modify the product in any way. Doing so voids the warranty.
- Keep the packaging material out of the reach of children due to the risk of suffocation.
- Dispose of packaging material immediately according to locally applicable regulations.

Warning – Batteries



- When inserting batteries, note the correct polarity (+ and - markings) and insert the batteries accordingly. Failure to do so could result in the batteries leaking or exploding.
- Only use batteries (or rechargeable batteries) that match the specified type.
- Before you insert the batteries, clean the battery contacts and the polar contacts.
- Do not allow children to change batteries without supervision.
- Do not mix old and new batteries or batteries of a different type or make.
- Remove the batteries from products that are not being used for an extended period (unless these are being kept ready for an emergency).
- Do not short-circuit batteries.
- Do not charge batteries.
- Do not throw batteries in a fire.
- Keep batteries out of the reach of children.
- Never open, damage or swallow batteries or allow them to enter the environment. They can contain toxic, environmentally harmful heavy metals.
- Immediately remove and dispose of dead batteries from the product.
- Avoid storing, charging or using batteries in extreme temperatures.

4. Getting Started

4.1 Inserting the battery

Remove the battery that was already inserted into the clock, remove the protective film if necessary as well as the contact interrupter and the re-insert the battery with the correct polarity. The clock is ready for operation.

4.2. Replacing the battery

- Open the battery compartment on the back of the product.
- Remove and dispose of any used batteries. Insert the new battery (AA). Ensure that the polarity of the battery corresponds to the symbols in the battery compartment.
- Close the battery compartment.

5. Operation

5.1. Automatic time setting using the DCF signal

- Once you have removed the contact breaker, an acoustic signal sounds and the alarm clock automatically starts searching for a DCF signal.
- After approx. 5-10 minutes (depending on how quickly the radio signal was received), the hands will set themselves to the correct time.

5.2. Setting the time manually

- If the correct time has not been set after approx. 10 minutes, this means the clock could not find a DCF signal.
- Press and hold the **M.SET** button to manually set the correct time. Release the **M.SET** button once you have reached the required time.
- The clock automatically continues to search for the DCF signal on a daily basis. If the signal is received successfully, the manually set time is overwritten.
- You may need to change the installation location and avoid areas with possible sources of interference (cordless and mobile telephones, wireless speakers, etc.).

5.3. Starting manual reception

- Once the clock is running, press the **REC** button for 3 seconds. This will set the hands to the 12:00 position. Now the clock starts searching for the DCF signal.
- If no signal has been received, the clock will show the time previously saved.

5.4. Alarm

Setting the alarm

- Move the setting wheel on the back of the alarm clock to set the required alarm time.
- To activate/deactivate the alarm, move the slide switch to the **ON** or **OFF** position.

Stopping the alarm/snooze function

- If the alarm is activated, it is triggered at the set time and an alarm signal sounds for two minutes with increasing volume. The alarm automatically stops after this time and is then triggered again at the set alarm time.
- To stop the alarm early, move the slide switch to the **OFF** position.
- Move the slide switch back to the **ON** position to activate the alarm for the set alarm time.

Note – Snooze function



- While the alarm signal is sounding, press the **SNOOZE/LIGHT** button to activate the snooze function. The alarm signal will be stopped for 5 minutes, after which it will sound again.
- The snooze function can be activated nine consecutive times.

5.5. Backlight

- If you press the **SNOOZE/LIGHT** button, the clock face will light up for approx. 5 seconds.

6. RESET function:

- If, for whatever reason, the clock has not been set correctly, you can reset it.
- Use a metal object (such as a needle) to short-circuit the clock by means of the **RESET** button on the rear side. All hands will move to the 12:00 position.
- After approx. 5-10 minutes (depending on how quickly the signal was received), the hands will automatically set themselves to the correct time.

Obsah je uzamčen

Dokončete, prosím, proces objednávky.

Následně budete mít přístup k celému dokumentu.



Proč je dokument uzamčen? Nahněvat Vás rozhodně nechceme. Jsou k tomu dva hlavní důvody:

- 1) Vytvořit a udržovat obsáhlou databázi návodů stojí nejen spoustu úsilí a času, ale i finanční prostředky. Dělali byste to Vy zadarmo? Ne*. Zakoupením této služby obdržíte úplný návod a podpoříte provoz a rozvoj našich stránek. Třeba se Vám to bude ještě někdy hodit.

**) Možná zpočátku ano. Ale vězte, že dotovat to dlouhodobě nelze. A rozhodně na tom nezbohatneme.*

- 2) Pak jsou tady „roboti“, kteří se přiživují na naší práci a „vysávají“ výsledky našeho úsilí pro svůj prospěch. Tímto krokem se jim to snažíme překazit.

A pokud nemáte zájem, respektujeme to. Urgujte svého prodejce. A když neuspějete, rádi Vás uvidíme!