



 
hama[®]

THE SMART SOLUTION

00
186333

„Extra” Radio Wall Clock

Funkwanduhr „Extra”

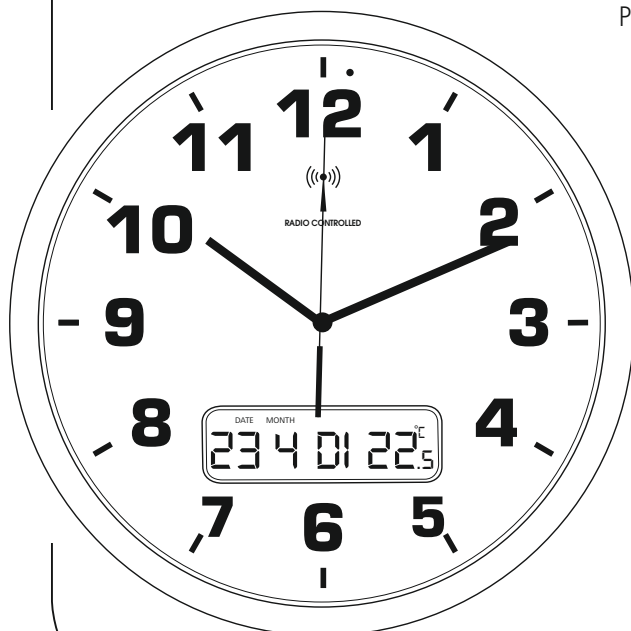

Operating Instructions

GB

Bedienungsanleitung

D

Mode d'emploi

F

Instrucciones de uso

E

Руководство по эксплуатации

RUS

Istruzioni per l'uso

I

Gebruiksaanwijzing

NL

Οδηγίες χρήσης

GR

Instrukcja obsługi

PL

Használati útmutató

H

Návod k použití

CZ

Návod na použitie

SK

Manual de instruções

P

Manual de utilizare

RO

Bruksanvisning

 
 
 
S

Käyttöohje

FIN

Работна инструкция

BG

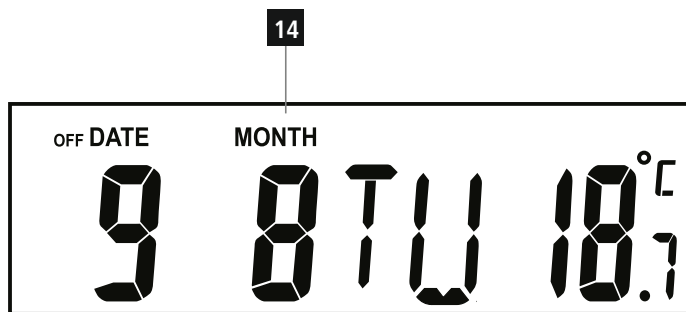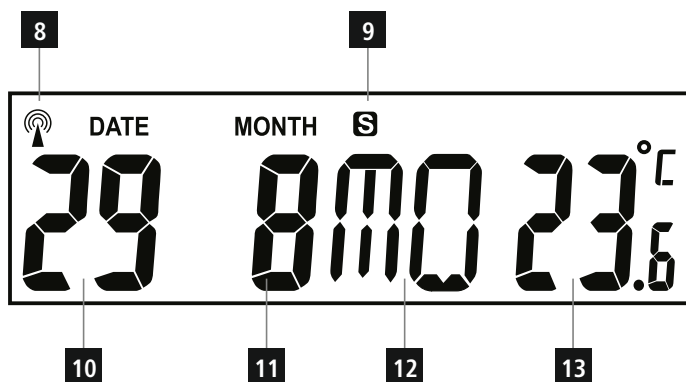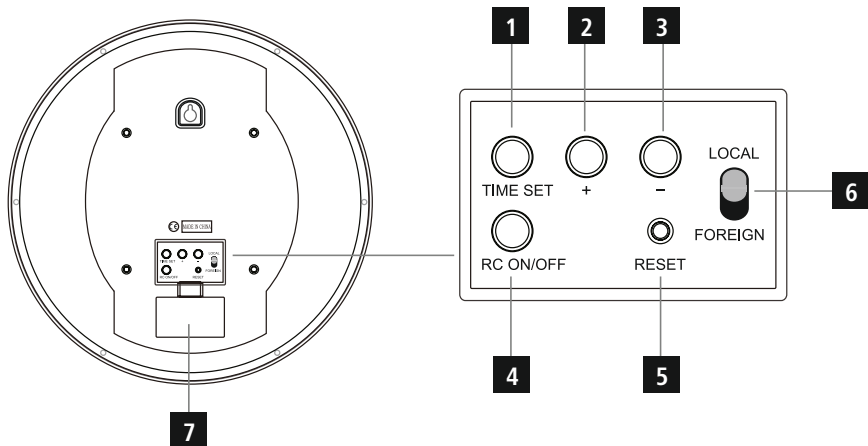

Controls and displays

1. **TIME SET** = setting the local time and foreign time
2. **+** = increases the current set value
3. **-** = reduces the current set value
4. **RC On/Off** = activating/deactivating RC
5. **RESET** = restoring factory settings
6. **LOCAL/FOREIGN** slide switch
= If you select 'LOCAL', the clock displays Central European Time. If you select 'FOREIGN', the clock displays the desired time zone (European time + the set time zone -> 'F' symbol lights up)
7. Battery compartment
8. Radio symbol
9. Summer time
10. Day
11. Month
12. Day of the week
13. Room temperature
14. OFF = radio mode is deactivated

1. Explanation of Warning Symbols and Notes

Warning

This symbol is used to indicate safety instructions or to draw your attention to specific hazards and risks.



Note

This symbol is used to indicate additional information or important notes.



2. Package contents

- 1 DCF radio-controlled wall clock
- 2 AA Mignon batteries
- These operating instructions

3. Safety Notes

- The product is intended for private, non-commercial use only.
- Use the product for its intended purpose only.
- Protect the product from dirt, moisture and overheating, and only use it in a dry environment.
- Do not use the product in the immediate vicinity of heaters or other heat sources or in direct sunlight.
- Do not operate the product continuously, as it is not designed for this.
- Do not drop the product and do not expose it to any major shocks.
- Do not attempt to service or repair the product yourself. Leave any and all service work to qualified experts.
- Do not put the product near interference fields, metal frames, computers, TVs, etc. Electronic devices and window frames can negatively affect the product's functionality.
- Do not modify the product in any way. Doing so voids the warranty.
- Keep the packaging material out of the reach of children due to the risk of suffocation.
- Dispose of packaging material immediately according to locally applicable regulations.

Warning – Batteries

- When inserting batteries, note the correct polarity (+ and - markings) and insert the batteries accordingly. Failure to do so could result in the batteries leaking or exploding.
- Only use batteries (or rechargeable batteries) that match the specified type.
- Before you insert the batteries, clean the battery contacts and the polar contacts.
- Do not allow children to change batteries without supervision.
- Do not mix old and new batteries or batteries of a different type or make.
- Remove the batteries from products that are not being used for an extended period (unless these are being kept ready for an emergency).
- Do not short-circuit batteries.



- Do not charge batteries.
- Do not throw batteries in a fire.
- Keep batteries out of the reach of children.
- Never open, damage or swallow batteries or allow them to enter the environment. They can contain toxic, environmentally harmful heavy metals.
- Immediately remove and dispose of dead batteries from the product.
- Avoid storing, charging or using the device in extreme temperatures and extremely low atmospheric pressure (for example, at high altitudes).

4. Getting Started

4.1. Inserting the battery

- Open the battery compartment (7), remove the contact breaker and then close the battery compartment (7). The clock is ready for operation.
- If the display remains blank after inserting a new battery, change the batteries or press the **RESET** button (5) on the back of the clock using a pointed object.

4.2. Replacing the battery

- Open the battery compartment on the back of the product.
- Remove and dispose of any used batteries. Insert the new battery (AA). Ensure that the polarity of the battery corresponds to the symbols in the battery compartment.
- Close the battery compartment.

5. Installation

Warning – Mounting Note:

- Before mounting the clock, ensure that the chosen wall is suitable for the weight to be mounted, and make sure that there are no electrical wires, water, gas or other lines at the installation site on the wall.
- Purchase special fastening materials from specialised dealers.
- Do not mount the product above locations where persons might linger.



You can mount the wall clock on a wall using the opening on the back.

6. Operation

Note - Input

Hold down the **++** button (2) or the **--** button (3) to select the values faster.



6.1 Automatic date/time setting using the DCF signal

- Once the battery is inserted properly, the clock will automatically be set to 12:00 pm and its reception will be activated. As soon as the DCF signal was received and processed (approx. 3 minutes up to a maximum of 15 minutes), the correct time is displayed automatically.
- Do not move the clock during this process.
- If the clock has not correctly set itself after 15 minutes, there is a problem with the reception or with the selected location. Repeat the setting process at another location. First, remove the batteries for about 1 minute and then insert them again with the correct polarity.

Note

Note that electronic devices such as TVs, PCs, etc. can interfere with reception when located within up to two metres of the product.



Obsah je uzamčen

Dokončete, prosím, proces objednávky.

Následně budete mít přístup k celému dokumentu.



Proč je dokument uzamčen? Nahněvat Vás rozhodně nechceme. Jsou k tomu dva hlavní důvody:

- 1) Vytvořit a udržovat obsáhlou databázi návodů stojí nejen spoustu úsilí a času, ale i finanční prostředky. Dělali byste to Vy zadarmo? Ne*. Zakoupením této služby obdržíte úplný návod a podpoříte provoz a rozvoj našich stránek. Třeba se Vám to bude ještě někdy hodit.

**) Možná zpočátku ano. Ale vězte, že dotovat to dlouhodobě nelze. A rozhodně na tom nezbohatneme.*

- 2) Pak jsou tady „roboti“, kteří se přiživují na naší práci a „vysávají“ výsledky našeho úsilí pro svůj prospěch. Tímto krokem se jim to snažíme překazit.

A pokud nemáte zájem, respektujeme to. Urgujte svého prodejce. A když neuspějete, rádi Vás uvidíme!