



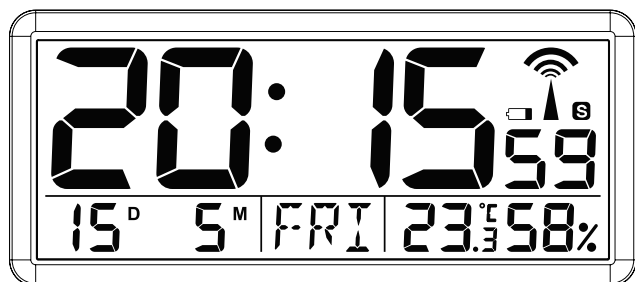 
hama

00
186352

Digital Radio Wall Clock

Jumbo

Digitale Funkwanduhr



Operating Instructions

GB

Bedienungsanleitung

D

Mode d'emploi

F

Instrucciones de uso

E

Gebbruiksaanwijzing

NL

Istruzioni per l'uso

I

Instrukcja obsługi

PL

Használati útmutató

H

Manual de utilizare

RO

Návod k použití

CZ

Návod na použitie

SK

Manual de instruções

P

Bruksanvisning

S

Руководство по эксплуатации

RUS

Работна инструкция

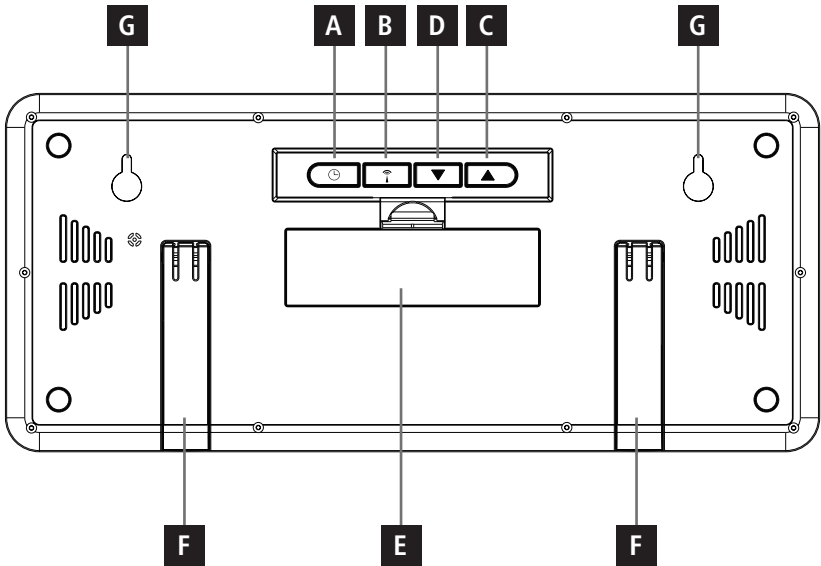 
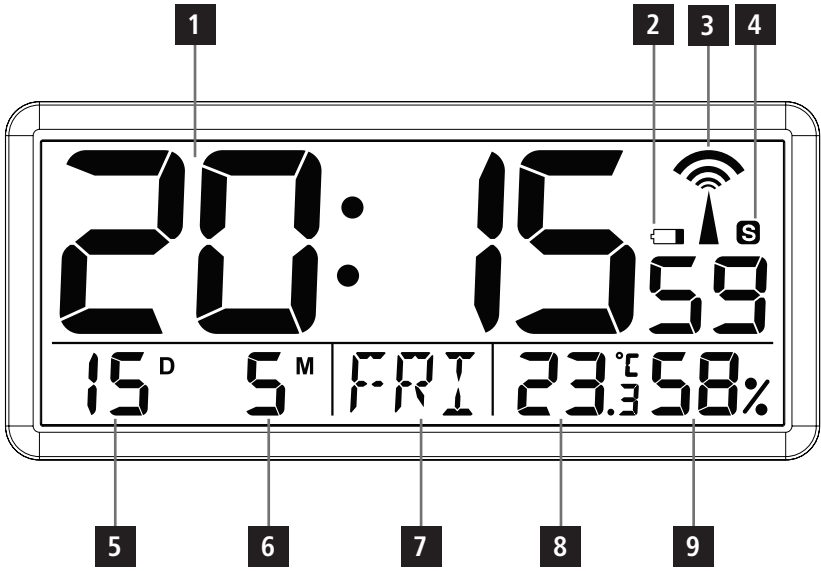 
BG

Οδηγίες χρήσης





GR

Käyttöohje

FIN



1. Controls and displays

1. Time
 2. Battery symbol
 3. Radio symbol
 4. Summertime
 5. Day
 6. Month
 7. Day of the week
 8. Room temperature
 9. Ambient humidity
- A.  button
= Settings / confirmation of the setting value
- B.  button
= Activation / deactivation of the manual radio signal reception
- C.  button
= Increase the current setting value / change the display mode
- D.  button
= Reduce the current setting value / switch between °C and °F
- E. Battery compartment
- F. Stand
- G. Cut-out for wall mounting

Thank you for choosing a Hama product.

Take your time and read the following instructions and information completely. Please keep these instructions in a safe place for future reference. If you sell the device, please pass these operating instructions on to the new owner.

2. Explanation of warning symbols and notes

Warning



This symbol is used to indicate safety instructions or to draw your attention to specific hazards and risks.

Note



This symbol is used to indicate additional information or important notes.

3. Package contents

- "Jumbo" digital radio wall clock
- 4 AA batteries
- These operating instructions

4. Safety instructions

- The product is intended for private, non-commercial use only.
- Use the product only for the intended purpose.
- Protect the product from dirt, moisture and overheating and use it in dry environments only.
- Do not use the product in the immediate vicinity of heaters, other heat sources or in direct sunlight.
- As with all electrical products, this device should be kept out of the reach of children.
- Do not operate the product outside the power limits specified in the technical data.
- Do not use the product in areas in which electronic products are not permitted.
- Do not use the product in a damp environment and avoid splashing water.
- Do not place the product near interference fields, metal frames, computers, TVs, etc. Electronic devices and window frames can negatively affect the product's functionality.
- Do not drop the product and do not expose it to any major shocks.
- Do not modify the product in any way. Doing so voids the warranty.
- Keep the packaging material out of the reach of children due to the risk of suffocation.
- Dispose of packaging material immediately in accordance with the locally applicable regulations.

Warning – Batteries



- When inserting batteries, note the correct polarity (+ and - markings) and insert the batteries accordingly. Failure to do so could result in the batteries leaking or exploding.
- Only use batteries (or rechargeable batteries) that match the specified type.
- Before you insert the batteries, clean the battery contacts and the polar contacts.
- Do not allow children to change batteries without supervision.
- Do not mix old and new batteries or batteries of a different type or make.
- Remove the batteries from products that are not being used for an extended period (unless these are being kept ready for an emergency).
- Do not short-circuit batteries.
- Do not charge batteries.
- Do not throw batteries in a fire.
- Keep batteries out of the reach of children.
- Never open, damage or swallow batteries or allow them to enter the environment. They can contain toxic, environmentally harmful heavy metals.
- Immediately remove and dispose of dead batteries from the product.
- Avoid storing, charging or using the device in extreme temperatures and extremely low atmospheric pressure (for example, at high altitudes).

5. Getting started


5.1. Inserting the battery

Open the battery compartment cover (E), remove the contact interrupter and close the battery compartment cover (E) again. The clock is ready for operation.

5.2. Changing the battery

- Remove and dispose of the spent battery if required. Insert four new batteries (AA). Take care to ensure the correct polarity as shown in the diagram in the battery compartment (E).

5.3. Low battery

- As soon as the battery symbol  (2) appears on the wall clock's display, the battery capacity is very low. Change the battery immediately.

6. Installation

Warning - installation instructions


 


- Before mounting, check that the wall you have chosen is suitable for the weight to be mounted. Also make sure that there are no electric, water, gas or other lines running through the wall at the mounting site.
- Obtain suitable attachment material from specialist retailers.
- Do not mount the product above locations where persons might sit or stand.
- You can attach the wall clock to a wall using the cut-out on the back (G).
- Alternatively, place the wall clock on a flat surface using the stand (F).

7. Operation

Information - entry



Hold the  button (C) or  button (D) down to select the values more quickly.

7.1 Automatic adjustment according to the DCF signal

- After the batteries are inserted, the clock automatically starts to search for a DCF signal. The radio symbol (3) flashes during the search process.

Obsah je uzamčen

Dokončete, prosím, proces objednávky.

Následně budete mít přístup k celému dokumentu.



Proč je dokument uzamčen? Nahněvat Vás rozhodně nechceme. Jsou k tomu dva hlavní důvody:

- 1) Vytvořit a udržovat obsáhlou databázi návodů stojí nejen spoustu úsilí a času, ale i finanční prostředky. Dělali byste to Vy zadarmo? Ne*. Zakoupením této služby obdržíte úplný návod a podpoříte provoz a rozvoj našich stránek. Třeba se Vám to bude ještě někdy hodit.

**) Možná zpočátku ano. Ale vězte, že dotovat to dlouhodobě nelze. A rozhodně na tom nezbohatneme.*

- 2) Pak jsou tady „roboti“, kteří se přiživují na naší práci a „vysávají“ výsledky našeho úsilí pro svůj prospěch. Tímto krokem se jim to snažíme překazit.

A pokud nemáte zájem, respektujeme to. Urgujte svého prodejce. A když neuspějete, rádi Vás uvidíme!