



hama[®]


THE SMART SOLUTION

00186383
00104936

Radio-Controlled DCF Wall Clock

"PP-245"

DCF-Funkwanduhr

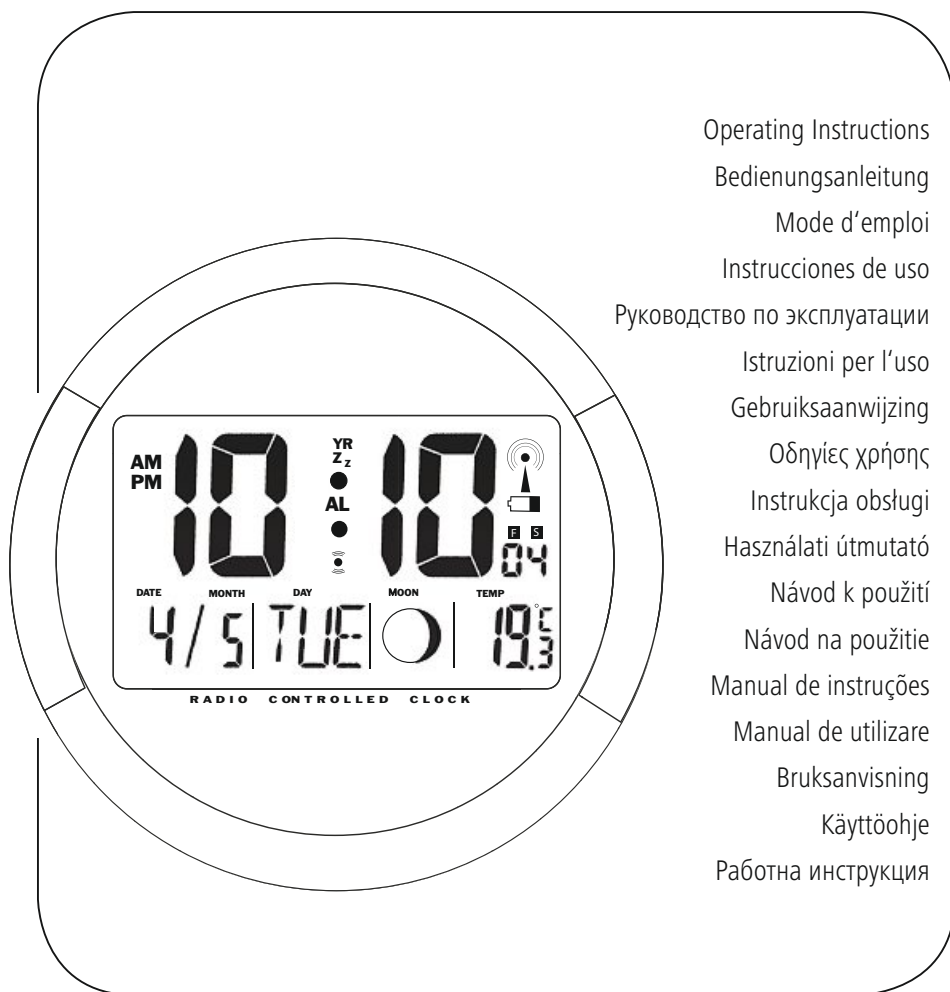

Operating Instructions

GB

Bedienungsanleitung

D

Mode d'emploi

F

Instrucciones de uso

E

Руководство по эксплуатации

RUS

Istruzioni per l'uso

I

Gebruiksaanwijzing

NL

Οδηγίες χρήσης

GR

Instrukcja obsługi

PL

Használati útmutató

H

Návod k použití

CZ

Návod na použitie

SK

Manual de instruções

P

Manual de utilizare

RO

Bruksanvisning



S

Käyttöohje

FIN

Работна инструкция

BG

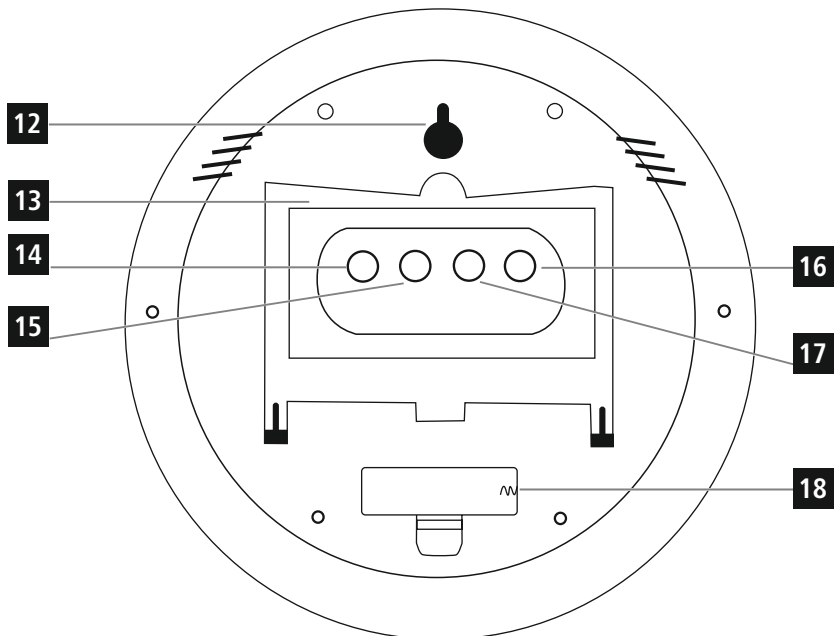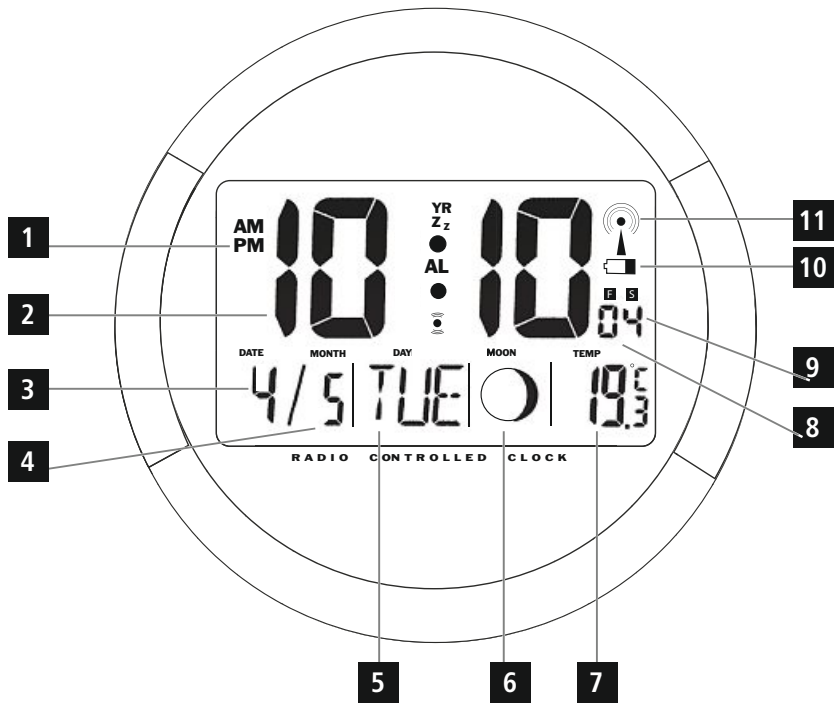

Controls and Displays

1. AM/PM (12-hour format)
2. Time
3. Day
4. Month
5. Day of the week
6. Moon phase
7. Room temperature
8. Time zone
9. Summer time
10. Battery symbol
11. Wireless symbol
12. Opening for wall mounting
13. Base
14. **MODE** button
= settings/confirming the setting
15. **°F/°C** button
= switches between °C and °F
16. **UP** button
= increases the current setting; activates/deactivates manual radio signal reception; switches the display mode
17. **DOWN** button
= decreases the current setting; activates/deactivates manual radio signal reception; selects the language
18. Battery compartment

Thank you for choosing a Hama product.

Take your time and read the following instructions and information completely. Please keep these instructions in a safe place for future reference. If you sell the device, please pass these operating instructions on to the new owner.

1. Explanation of Warning Symbols and Notes

Warning

This symbol is used to indicate safety instructions or to draw your attention to specific hazards and risks.



Note

This symbol is used to indicate additional information or important notes.



2. Package Contents

- PP-245 DCF wireless wall clock
- 1 AA battery
- These operating instructions

3. Safety Instructions

- The product is intended for private, non-commercial use only.
- Use the product for its intended purpose only.
- Protect the product from dirt, moisture and overheating, and only use it in a dry environment.
- Do not operate the product outside the power limits given in the specifications.
- Do not use the product in moist environments and avoid splashes.
- Do not use the product in the immediate vicinity of heaters or other heat sources or in direct sunlight.
- Do not use the product in areas where the use of electronic devices is not permitted.
- Do not place the product near interference fields, metal frames, computers, TVs, etc. Electronic devices and window frames can negatively affect the product's functionality.
- Do not drop the product and do not expose it to any major shocks.
- Do not open the device or continue to operate it if it becomes damaged.
- Do not attempt to service or repair the product yourself. Leave any and all service work to qualified experts.
- Keep the packaging material out of the reach of children due to the risk of suffocation.
- Dispose of packaging material immediately according to locally applicable regulations.
- Do not modify the product in any way. Doing so voids the warranty.

Warning – Batteries



- When inserting batteries, note the correct polarity (+ and - markings) and insert the batteries accordingly. Failure to do so could result in the batteries leaking or exploding.
- Only use batteries (or rechargeable batteries) that match the specified type.
- Before you insert the batteries, clean the battery contacts and the polar contacts.
- Do not allow children to change batteries without supervision.
- Do not mix old and new batteries or batteries of a different type or make.
- Remove the batteries from products that are not being used for an extended period (unless these are being kept ready for an emergency).
- Do not short-circuit batteries.
- Do not charge batteries.
- Do not throw batteries in a fire.
- Keep batteries out of the reach of children.
- Never open, damage or swallow batteries or allow them to enter the environment. They can contain toxic, environmentally harmful heavy metals.
- Immediately remove and dispose of dead batteries from the product.
- Avoid storing, charging or using batteries in extreme temperatures.

4. Getting Started

4.1 Inserting the battery

Remove the battery that was already inserted into the clock, remove the protective film if necessary as well as the contact interrupter and the re-insert the battery with the correct polarity. The clock is ready for operation.

4.2 Replacing the battery

Remove and dispose of any used batteries. Insert the new battery (AA). Ensure that the polarity of the battery corresponds to the symbols in the battery compartment (18).

5. Installation

Warning – Mounting Note



- Before mounting the clock, ensure that the chosen wall is suitable for the weight to be mounted, and make sure that there are no electrical wires, water, gas or other lines at the installation site on the wall.
- Purchase special fastening materials from specialised dealers.
- Do not mount the product above locations where persons might linger.
- You can mount the wall clock on a wall using the opening on the back (12).
- You can also stand the wall clock on a level surface using the base (13).

6. Operation



Note – Input



Hold down the **UP** button (16) or the **DOWN** button (17) to select the values faster.

6.1. Automatic setting using the DCF signal

- Once the batteries are inserted, the clock automatically searches for a DCF signal. During the search, the wireless icon (11) flashes.

Display	Searching for the DCF signal
 Display flashing	Active
 Displayed continuously	Successful – signal is being received
Not displayed	Deactivated

- If the station still does not receive a signal, press and hold the **UP** button (16) and the **DOWN** button (17) for approx. 3 seconds to start the manual search for the DCF signal. The wireless icon (11) will start to flash.

Obsah je uzamčen

**Dokončete, prosím, proces objednávky.
Následně budete mít přístup k celému dokumentu.**



Proč je dokument uzamčen? Nahněvat Vás rozhodně nechceme. Jsou k tomu dva hlavní důvody:

- 1) Vytvořit a udržovat obsáhlou databázi návodů stojí nejen spoustu úsilí a času, ale i finanční prostředky. Dělali byste to Vy zadarmo? Ne*. Zakoupením této služby obdržíte úplný návod a podpoříte provoz a rozvoj našich stránek. Třeba se Vám to bude ještě někdy hodit.

**) Možná zpočátku ano. Ale vězte, že dotovat to dlouhodobě nelze. A rozhodně na tom nezbohatneme.*

- 2) Pak jsou tady „roboti“, kteří se přiživují na naší práci a „vysávají“ výsledky našeho úsilí pro svůj prospěch. Tímto krokem se jim to snažíme překazit.

A pokud nemáte zájem, respektujeme to. Urgujte svého prodejce. A když neuspějete, rádi Vás uvidíme!