

CZ Scissor jack with ratchet

CZ Nůžkový hever s ráčnou
Překlad originálního návodu k použití

SK Nožnicový hever s račňou
Preklad pôvodného návodu na použitie

max. 
1 500 kg



Technical data / Technická data / Technické dáta

load capacity / nosnost heveru / nosnosť hevera /

1 500 kg

working stroke / pracovní zdvih / pracovný zdvih

250 - 385 mm


model / typ heveru / typ hevera

ST-105C

manufacturer / výrobce / výrobca

Foshan Shunde Shili Automotive
Accessories Co., Ltd.
Xiyong Industrial Zone, Lunjiao,
Shunde, Foshan, Guangdong 528308,
China

**PRACOVNÍ ZDVIH
PRACOVNÝ ZDVIH
WORKING STROKE
250 – 385 mm**

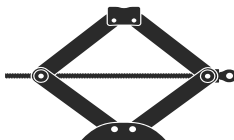

Read this manual thoroughly before first use.

Read this manual carefully before use.

Scissor jack with ratchet wrench, designed for lifting a part of the vehicle whose total weight, ie including the load, does not exceed 1500 kg. Thanks to its compact dimensions, this jack is suitable for permanent placement directly in the car so that it is at hand when needed.

Only professional use and adherence to safety measures can guarantee its trouble-free operation.

Lifting:

1. Secure the truck against rolling away before lifting it. Engage 1st gear (select "P" for vehicles with automatic transmission), apply the parking brake and secure the vehicle with wedges.
2. Place the jack under the car so that it acts only on a place of the car chassis or body that is specified by the manufacturer for this purpose. Failure to do so could result in damage to the car.
3. Insert the included ratchet wrench on the jack control mechanism.
4. At the wrench, move the ratchet mechanism to the correct position and tighten clockwise to raise the vehicle to the required height.
5. Secure the vehicle immediately with a solid, stable support.

Lowering:

To start the vehicle, release counterclockwise using wrench.

Caution:

Always take care, if the jack is placed on a solid and flat ground. The lifted vehicle must be firmly placed on the center of the support part of the jack and must be secured against movement. Do not overload the lifter, ie do not lift the whole vehicle at once. Never work under the vehicle unless it is secured via fixed supports or autoramp.

Maintenance of the jack:

If the jack is out of service for a long time, treat the moving parts with a suitable oil, or grease.

Obsah je uzamčen

Dokončete, prosím, proces objednávky.

Následně budete mít přístup k celému dokumentu.



Proč je dokument uzamčen? Nahněvat Vás rozhodně nechceme. Jsou k tomu dva hlavní důvody:

- 1) Vytvořit a udržovat obsáhlou databázi návodů stojí nejen spoustu úsilí a času, ale i finanční prostředky. Dělali byste to Vy zadarmo? Ne*. Zakoupením této služby obdržíte úplný návod a podpoříte provoz a rozvoj našich stránek. Třeba se Vám to bude ještě někdy hodit.

**) Možná zpočátku ano. Ale vězte, že dotovat to dlouhodobě nelze. A rozhodně na tom nezbohatneme.*

- 2) Pak jsou tady „roboti“, kteří se přiživují na naší práci a „vysávají“ výsledky našeho úsilí pro svůj prospěch. Tímto krokem se jim to snažíme překazit.

A pokud nemáte zájem, respektujeme to. Urgujte svého prodejce. A když neuspějete, rádi Vás uvidíme!