


HiFi set with Internet, DAB+, FM Radio, CD/MP3 Player and Turntable


QUICK START GUIDE

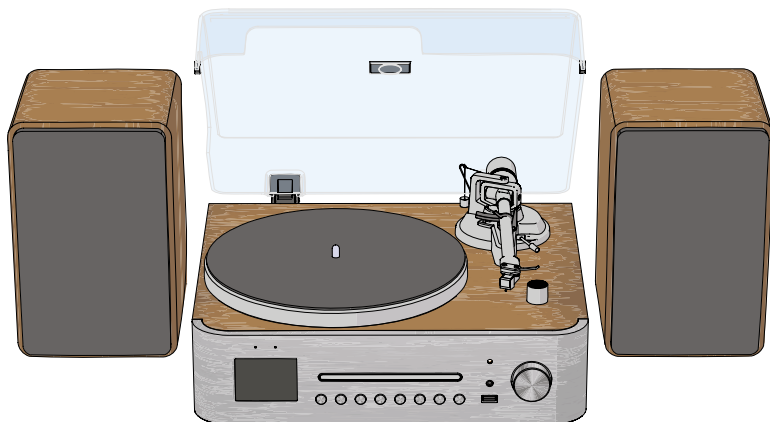

For more information, scan the QR code or go to the following link to see the extended manual:
<https://cdn.nedis.com/manuals/html/MC-760BK>
<https://cdn.nedis.com/manuals/html/MC-860WDSI>

(EN) Quick start guide	7	(HU) Gyors beüzemelési útmutató	81
(DE) Kurzanleitung	13	(PL) Przewodnik Szybki start	88
(FR) Guide d'utilisation rapide	20	(EL) Οδηγός γρήγορης εκκίνησης	95
(NL) Snelstartgids	27	(SK) Rýchly návod	102
(IT) Guida rapida all'avvio	34	(CS) Rychlý návod	109
(ES) Guía de inicio rápido	41	(RO) Ghid rapid de inițiere	115
(PT) Guia de iniciação rápida	48	Lühijuhend	122
(SV) Snabbstartsguide	55	(LV) Ātrās palaišanas ceļvedis	128
(FI) Pika-aloitusopas	62	(LT) Greitasis pradžios vadovas	135
(NO) Hurtigguide	68	(TR) Hızlı başlangıç kılavuzu	142
(DA) Vejledning til hurtig start	75		

A

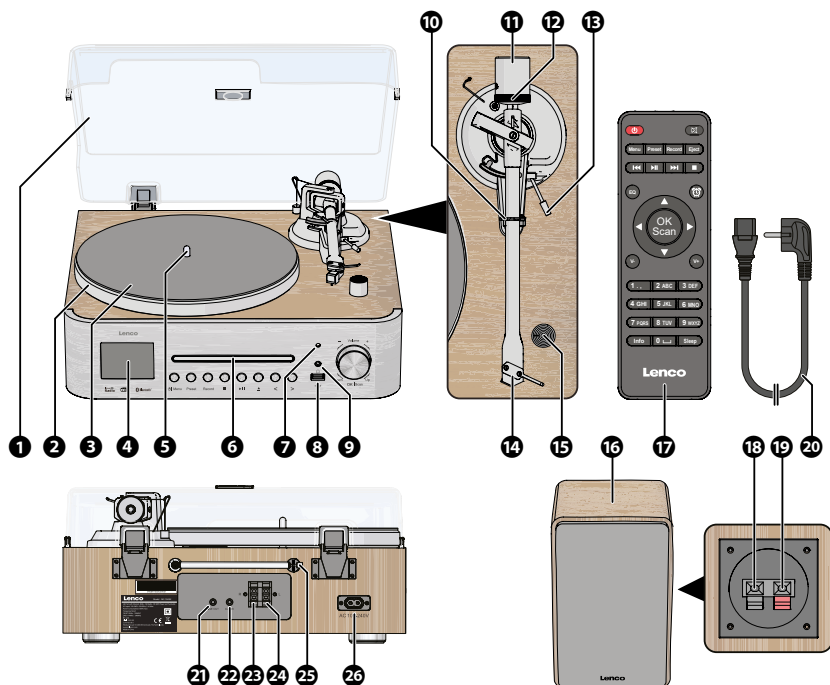

The diagram shows the front panel of the car stereo unit with the following controls and callouts:

- Callout 27:** Power button (indicated by a power symbol).
- Callout 28:** Menu button (indicated by the word "Menu").
- Callout 29:** Preset button (indicated by the word "Preset").
- Callout 30:** Record button (indicated by the word "Record").
- Callout 31:** Stop/Eject button (indicated by a square button).
- Callout 32:** Previous track button (indicated by a left-pointing triangle button).
- Callout 33:** Play/Pause button (indicated by a right-pointing triangle button).
- Callout 34:** Next track button (indicated by a right-pointing triangle button).
- Callout 35:** Volume knob (indicated by the word "Volume" and "OK | Scan" at the bottom).

A detailed diagram of the Lenco remote control, showing its layout and controls. The remote is black with a silver-colored circular navigation pad in the center. The brand name 'Lenco' is printed at the bottom. Numbered callouts (1-19) point to the following features:

- 1: Power button (red)
- 2: Menu button
- 3: Preset button
- 4: Record button
- 5: Eject button
- 6: EQ button
- 7: Left arrow button
- 8: V- (Volume Down) button
- 9: Numeric keypad (1-9, 0, ., *, #)
- 10: Info button
- 11: Mute button
- 12: Play/Pause button
- 13: Stop button
- 14: Next button
- 15: Previous button
- 16: Alarm clock icon button
- 17: OK/Scan button (center of navigation pad)
- 18: V+ (Volume Up) button
- 19: Sleep button

A detailed diagram of a turntable assembly. It shows a wooden-textured base unit with a control panel on the left featuring a digital display, a volume knob, and several buttons. On top of the unit is a circular platter with a radial groove pattern. A tonearm is mounted on the right side, holding a stylus that is positioned over the platter. A large black arrow points down from the stylus tip to the center of the platter. Above the platter, two circular discs are shown in a stacked, exploded view, representing the record and a dust cover.

Obsah je uzamčen

**Dokončete, prosím, proces objednávky.
Následně budete mít přístup k celému dokumentu.**



Proč je dokument uzamčen? Nahněvat Vás rozhodně nechceme. Jsou k tomu dva hlavní důvody:

- 1) Vytvořit a udržovat obsáhlou databázi návodů stojí nejen spoustu úsilí a času, ale i finanční prostředky. Dělali byste to Vy zadarmo? Ne*. Zakoupením této služby obdržíte úplný návod a podpoříte provoz a rozvoj našich stránek. Třeba se Vám to bude ještě někdy hodit.

**) Možná zpočátku ano. Ale vězte, že dotovat to dlouhodobě nelze. A rozhodně na tom nezbohatneme.*

- 2) Pak jsou tady „roboti“, kteří se přiživují na naší práci a „vysávají“ výsledky našeho úsilí pro svůj prospěch. Tímto krokem se jim to snažíme překazit.

A pokud nemáte zájem, respektujeme to. Urgujte svého prodejce. A když neuspějete, rádi Vás uvidíme!