

nedis

MEPH150WT



MANUAL (p. 2)
MEGAPHONE 10 W + MICROPHONE

MODE D'EMPLOI (p. 6)
MEGAPHONE DE 10 W + MICROPHONE

MANUALE (p. 10)
MEGAFONO DA 10W + MICROFONO

HASZNÁLATI ÚTMUTATÓ (o. 14.)
HANGOSBESZÉLŐ 10W + MIKROFON

BRUKSANVISNING (s. 18)
MEGAFON 10W + MIKROFON

MANUAL DE UTILIZARE (p. 22)
MEGAFON 10W + MICROFON

BRUGERVEJLEDNING (p. 26)
MEGAFON 10W + MIKROFON

ANLEITUNG (s. 4)
MEGAPHON 10 W + MIKROFON

GEbruIKSAANWIJZING (p. 8)
MEGAFOON 10 W + MICROFOON

MANUAL DE USO (p. 12)
MEGAFONO DE 10W + MICRÓFONO

KÄYTTÖOHJE (s. 16)
MEGAFONI 10W + MIKROFONI

NÁVOD K POUŽITÍ (s. 20)
10 W MEGAFON S MIKROFONEM

ΕΓΧΕΙΡΙΔΙΟ ΧΡΗΣΗΣ (σελ. 24)
ΜΕΓΑΦΩΝΟ 10W + ΜΙΚΡΟΦΩΝΟ

VEILEDNING (p. 28)
MEGAFON 10W + MIKROFON


ENGLISH

Introduction:

10 W megaphone with built-in siren and whistle. Detachable microphone with speech lock and volume control on the microphone. The range of the powerful 10 W amplifier is up to 250 m. Handy shoulder strap. Ideal megaphone for all kinds of events.

Description:

1. Shoulder strap
2. Battery compartment
3. Bracket for microphone
4. Volume control
5. Speak button of separate microphone
6. Pistol grip
7. Speak button
8. Switch for siren, speak

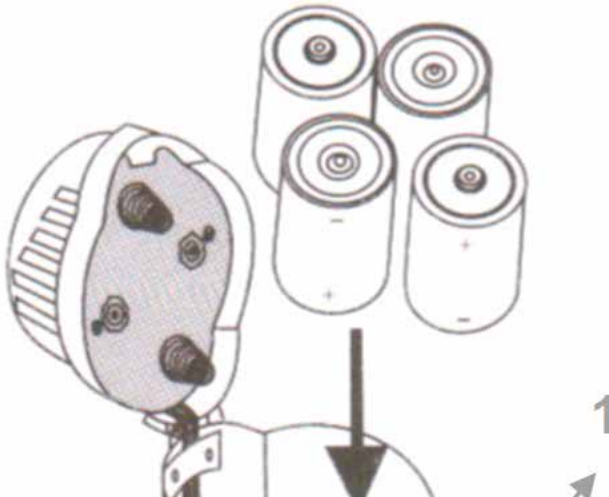

Operation:

1. First install the batteries. Open the battery compartment. Remove the 4 plastic tubes and insert the batteries into the plastic tubes. Place the plastic tubes with the batteries into the battery compartment according to the indicated polarity (+ and -). Close the battery compartment.



2. Adjust the volume to the desired level and press the activation switch to activate the megaphone.

Specifications:

- Amplifier: max. 10 W
- Range: \pm 250 m
- Power: 4 x D 1.5 V (not included)
- Battery life: \pm 5 hours
- Sound: siren, whistle (1.600~2.400Hz)
- Dimensions: \varnothing 158 mm, L 250 mm
- Weight: 490 gr (without batteries)

Warning:

Do not use the megaphone close to people's (or animal's) ears. This may cause hearing damage.

Safety precautions:

Do not expose the product to water or moisture.

Maintenance:

Clean only with a dry cloth. Do not use cleaning solvents or abrasives.

Warranty:

No guarantee or liability can be accepted for any changes and modifications of the product or damage caused due to incorrect use of this product.

General:

Designs and specifications are subject to change without notice.

All logos brands and product names are trademarks or registered trademarks of their respective holders and are hereby recognized as such.

Keep this manual and packaging for future reference.

Attention:

This product is marked with this symbol. It means that used electrical and electronic products should not be mixed with general household waste. There is a separate collections system for these products.

Obsah je uzamčen

Dokončete, prosím, proces objednávky.

Následně budete mít přístup k celému dokumentu.



Proč je dokument uzamčen? Nahněvat Vás rozhodně nechceme. Jsou k tomu dva hlavní důvody:

- 1) Vytvořit a udržovat obsáhlou databázi návodů stojí nejen spoustu úsilí a času, ale i finanční prostředky. Dělali byste to Vy zadarmo? Ne*. Zakoupením této služby obdržíte úplný návod a podpoříte provoz a rozvoj našich stránek. Třeba se Vám to bude ještě někdy hodit.

**) Možná zpočátku ano. Ale vězte, že dotovat to dlouhodobě nelze. A rozhodně na tom nezbohatneme.*

- 2) Pak jsou tady „roboti“, kteří se přiživují na naší práci a „vysávají“ výsledky našeho úsilí pro svůj prospěch. Tímto krokem se jim to snažíme překazit.

A pokud nemáte zájem, respektujeme to. Urgujte svého prodejce. A když neuspějete, rádi Vás uvidíme!